


CONVENTIONAL BLOTTING

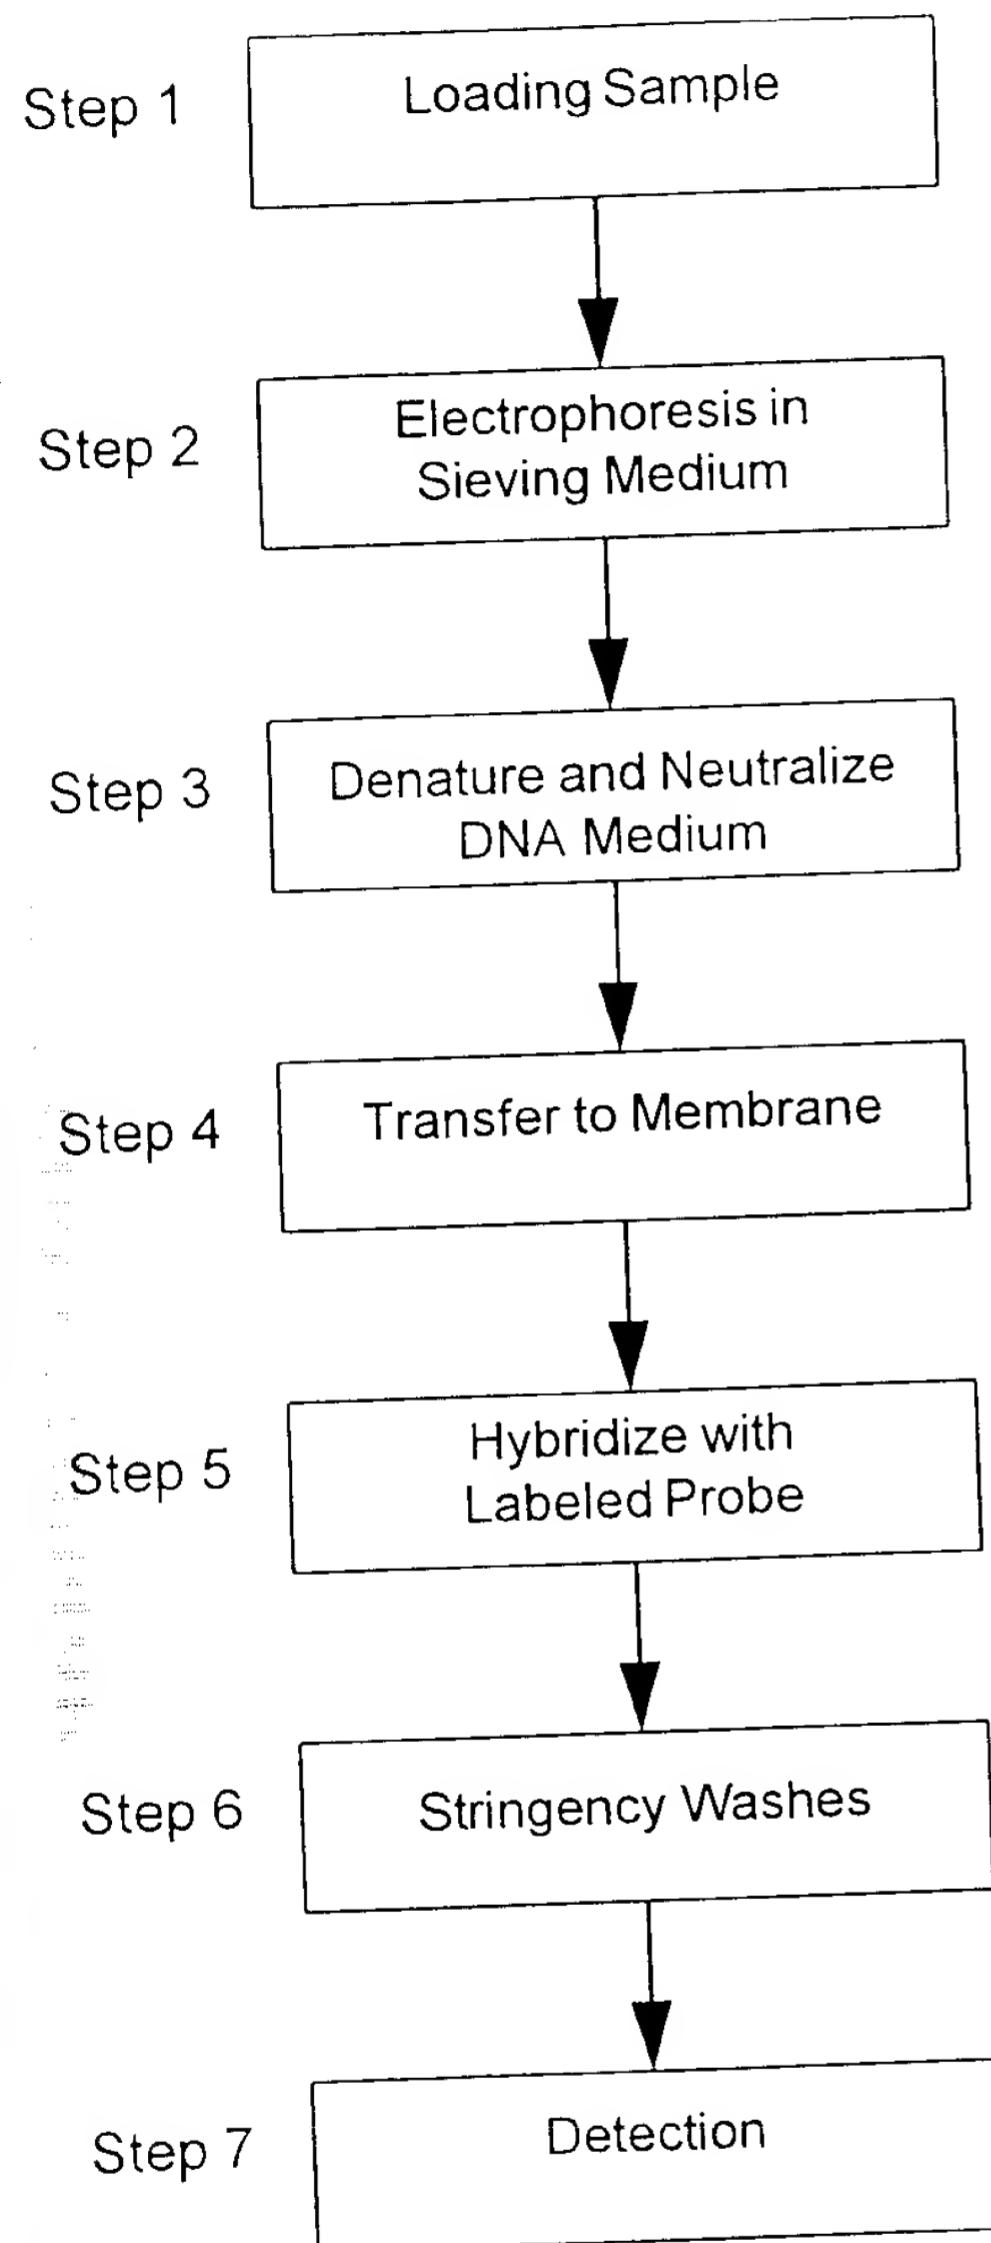

NO-BLOT ANALYSIS


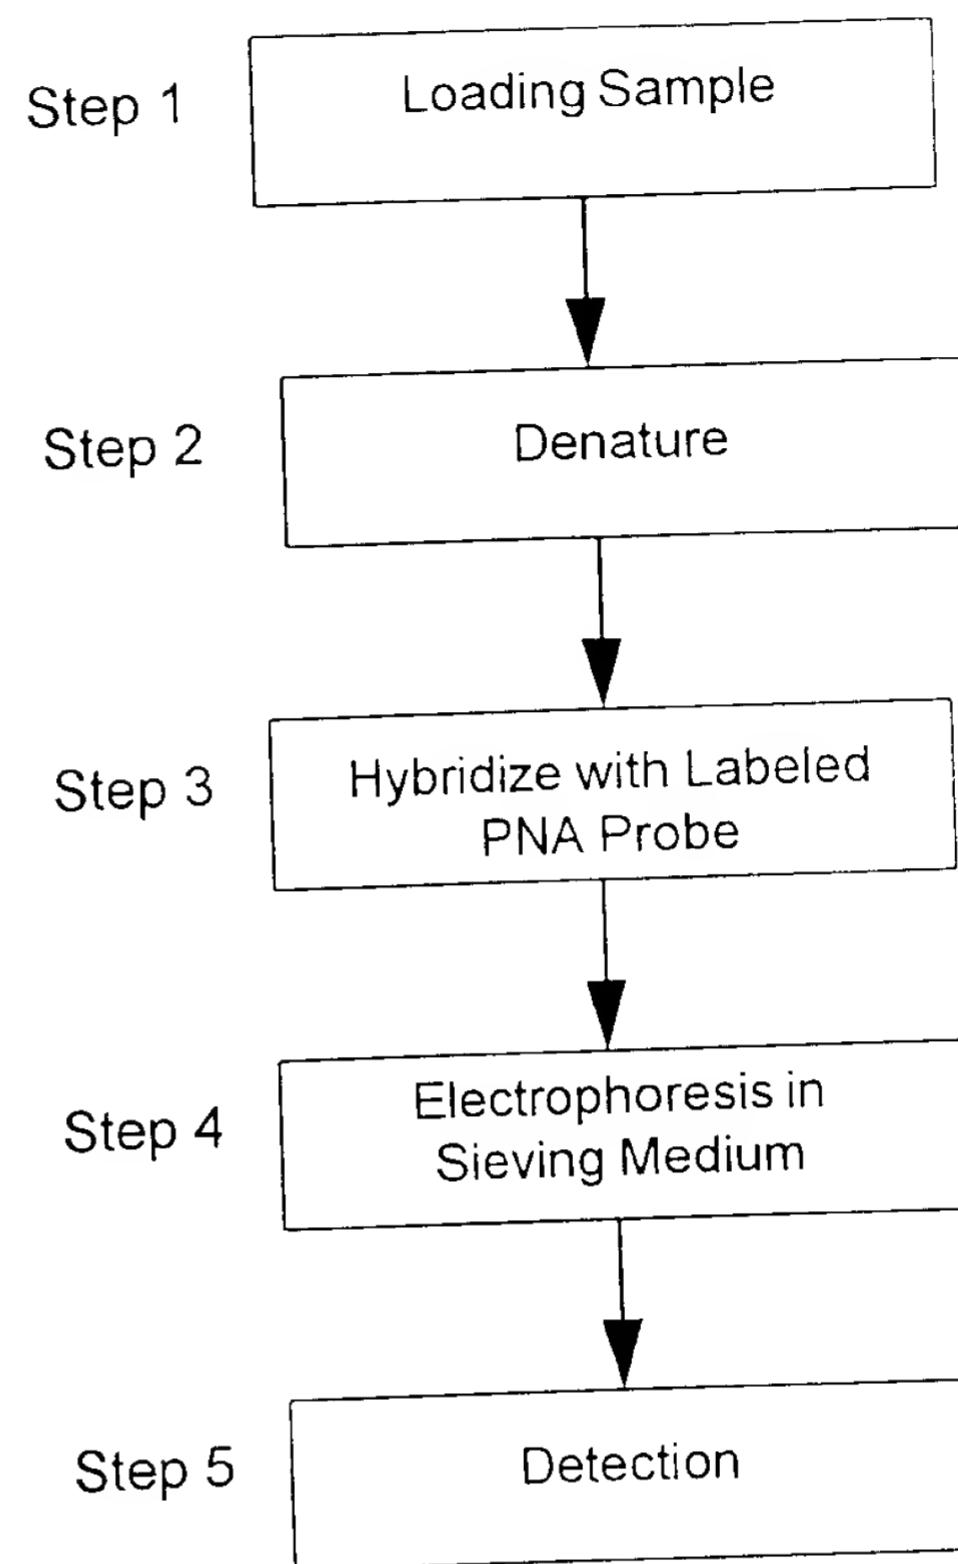


FIGURE 1


08 726093

FIGURE 2

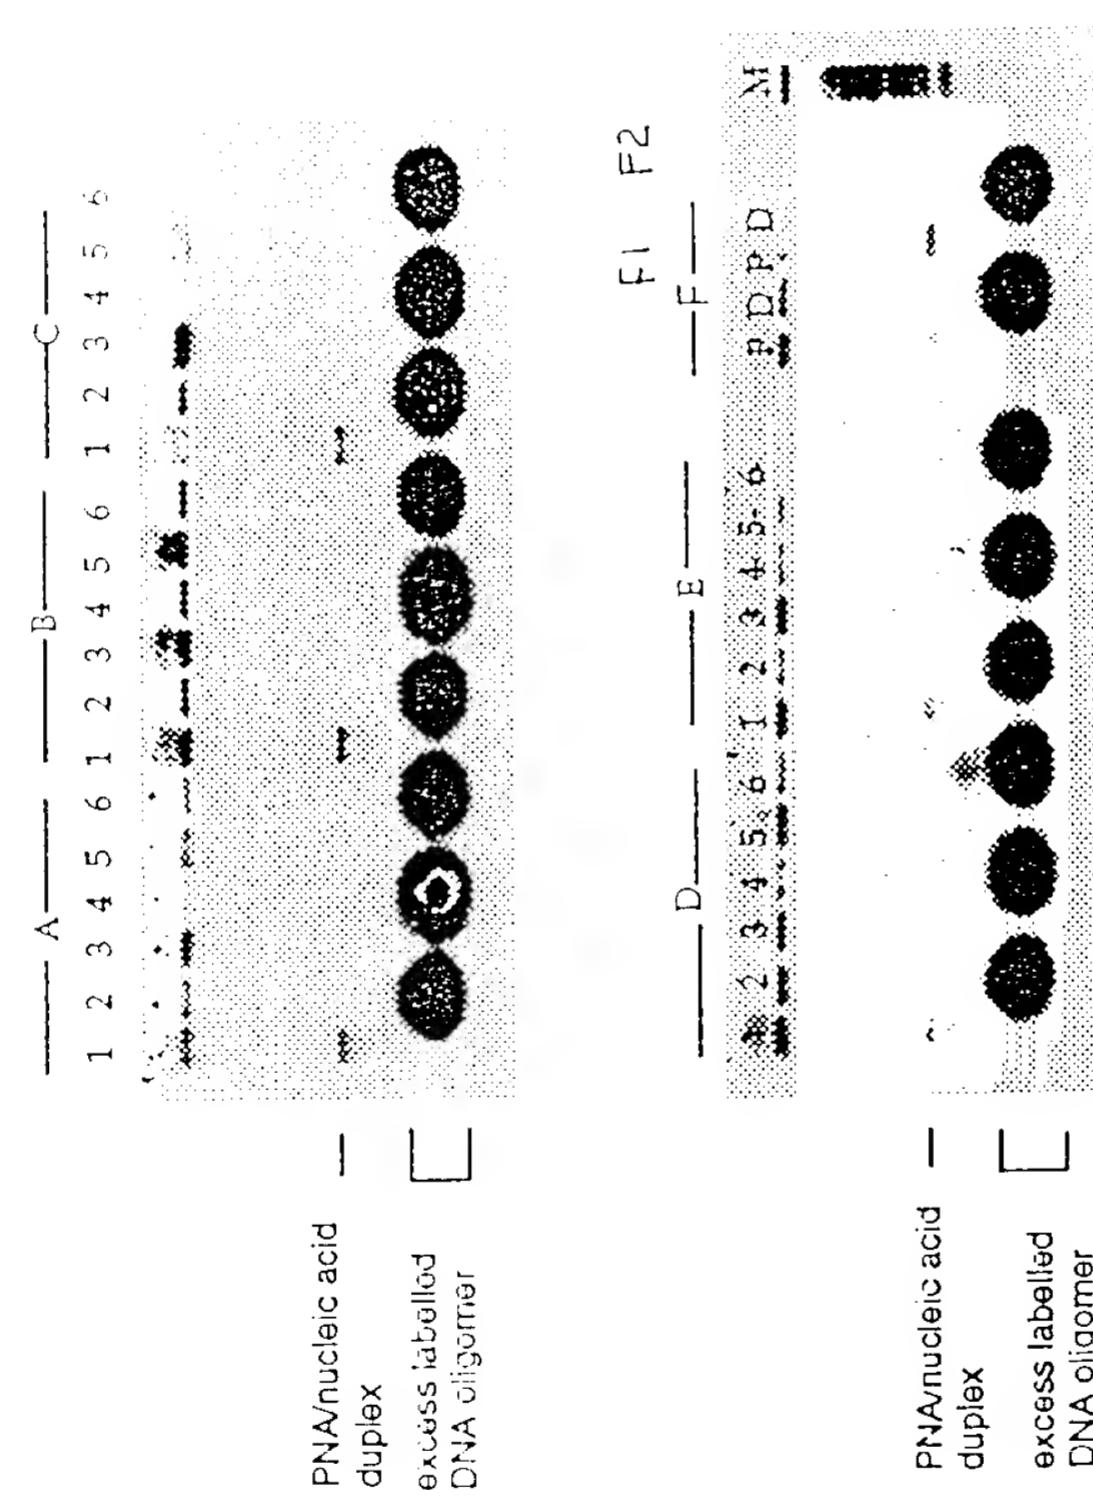


08 726093

FIGURE 3

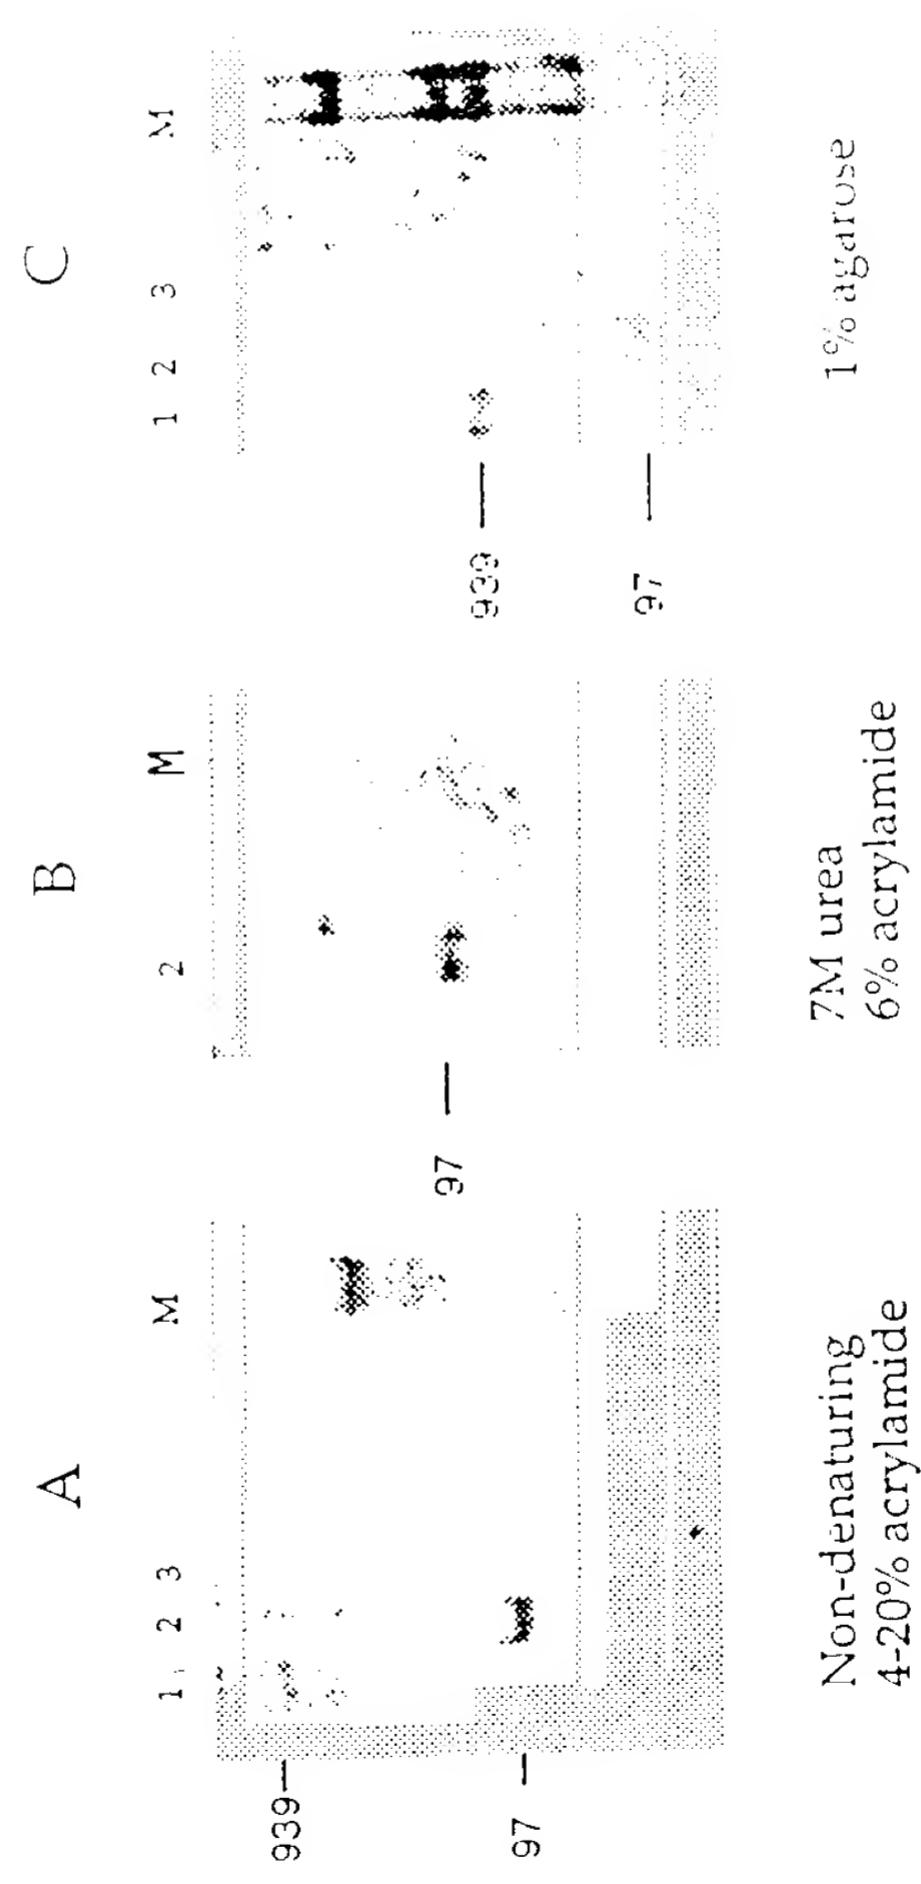


08 726093

FIGURE 4

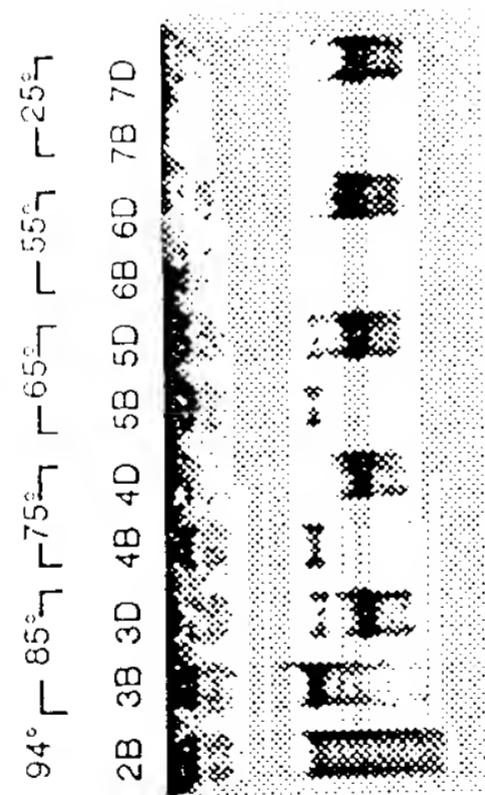


08 726093

FIGURE 4A

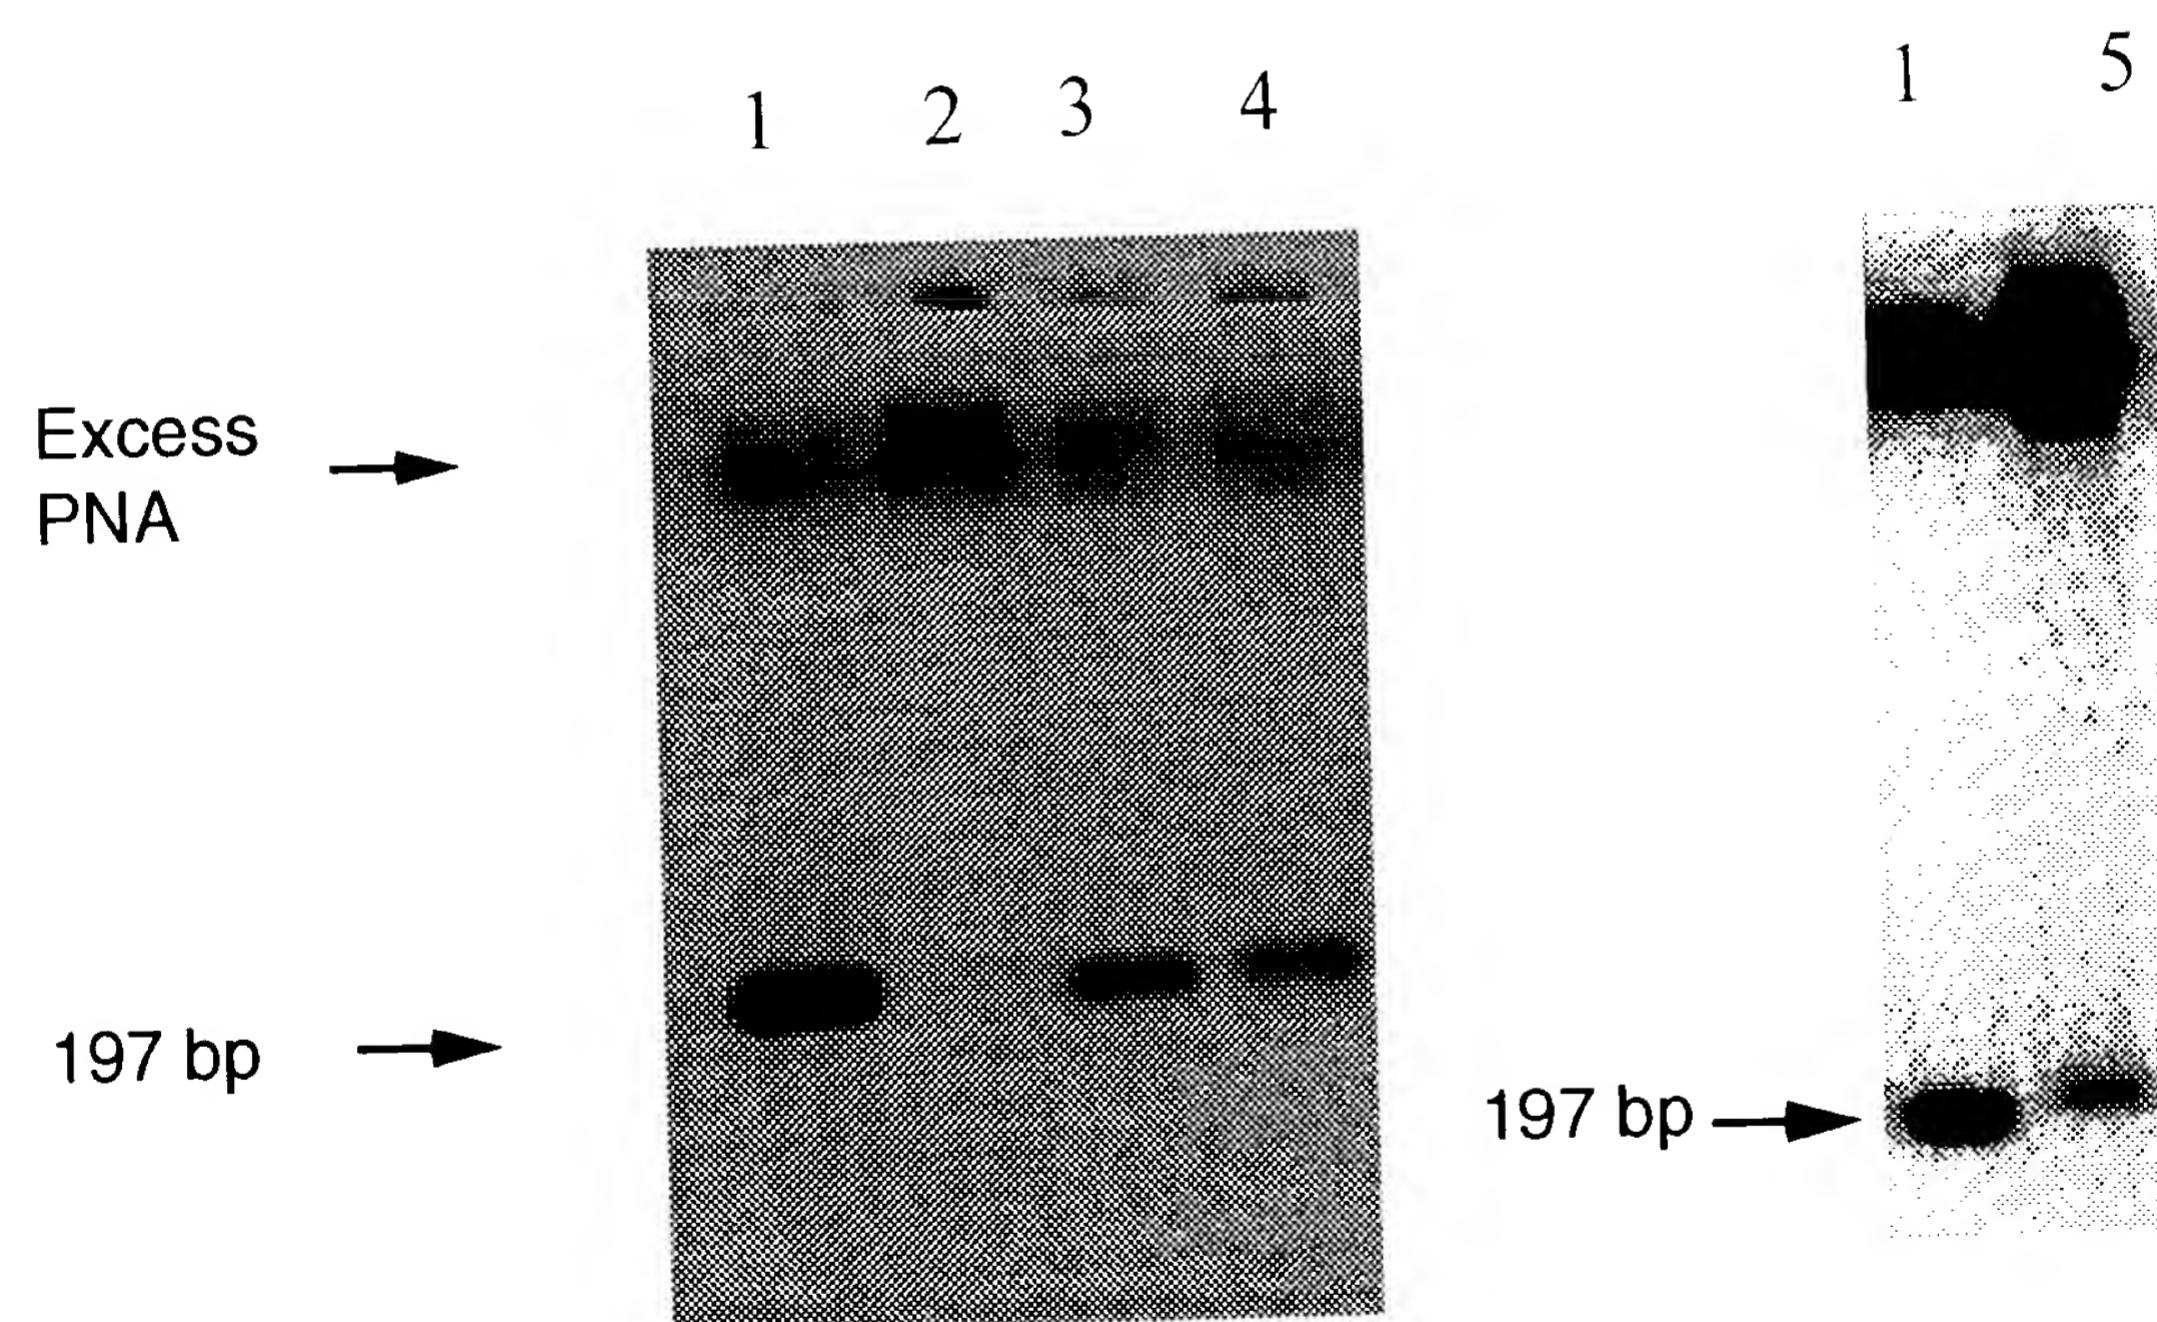

08 726093

FIGURE 5

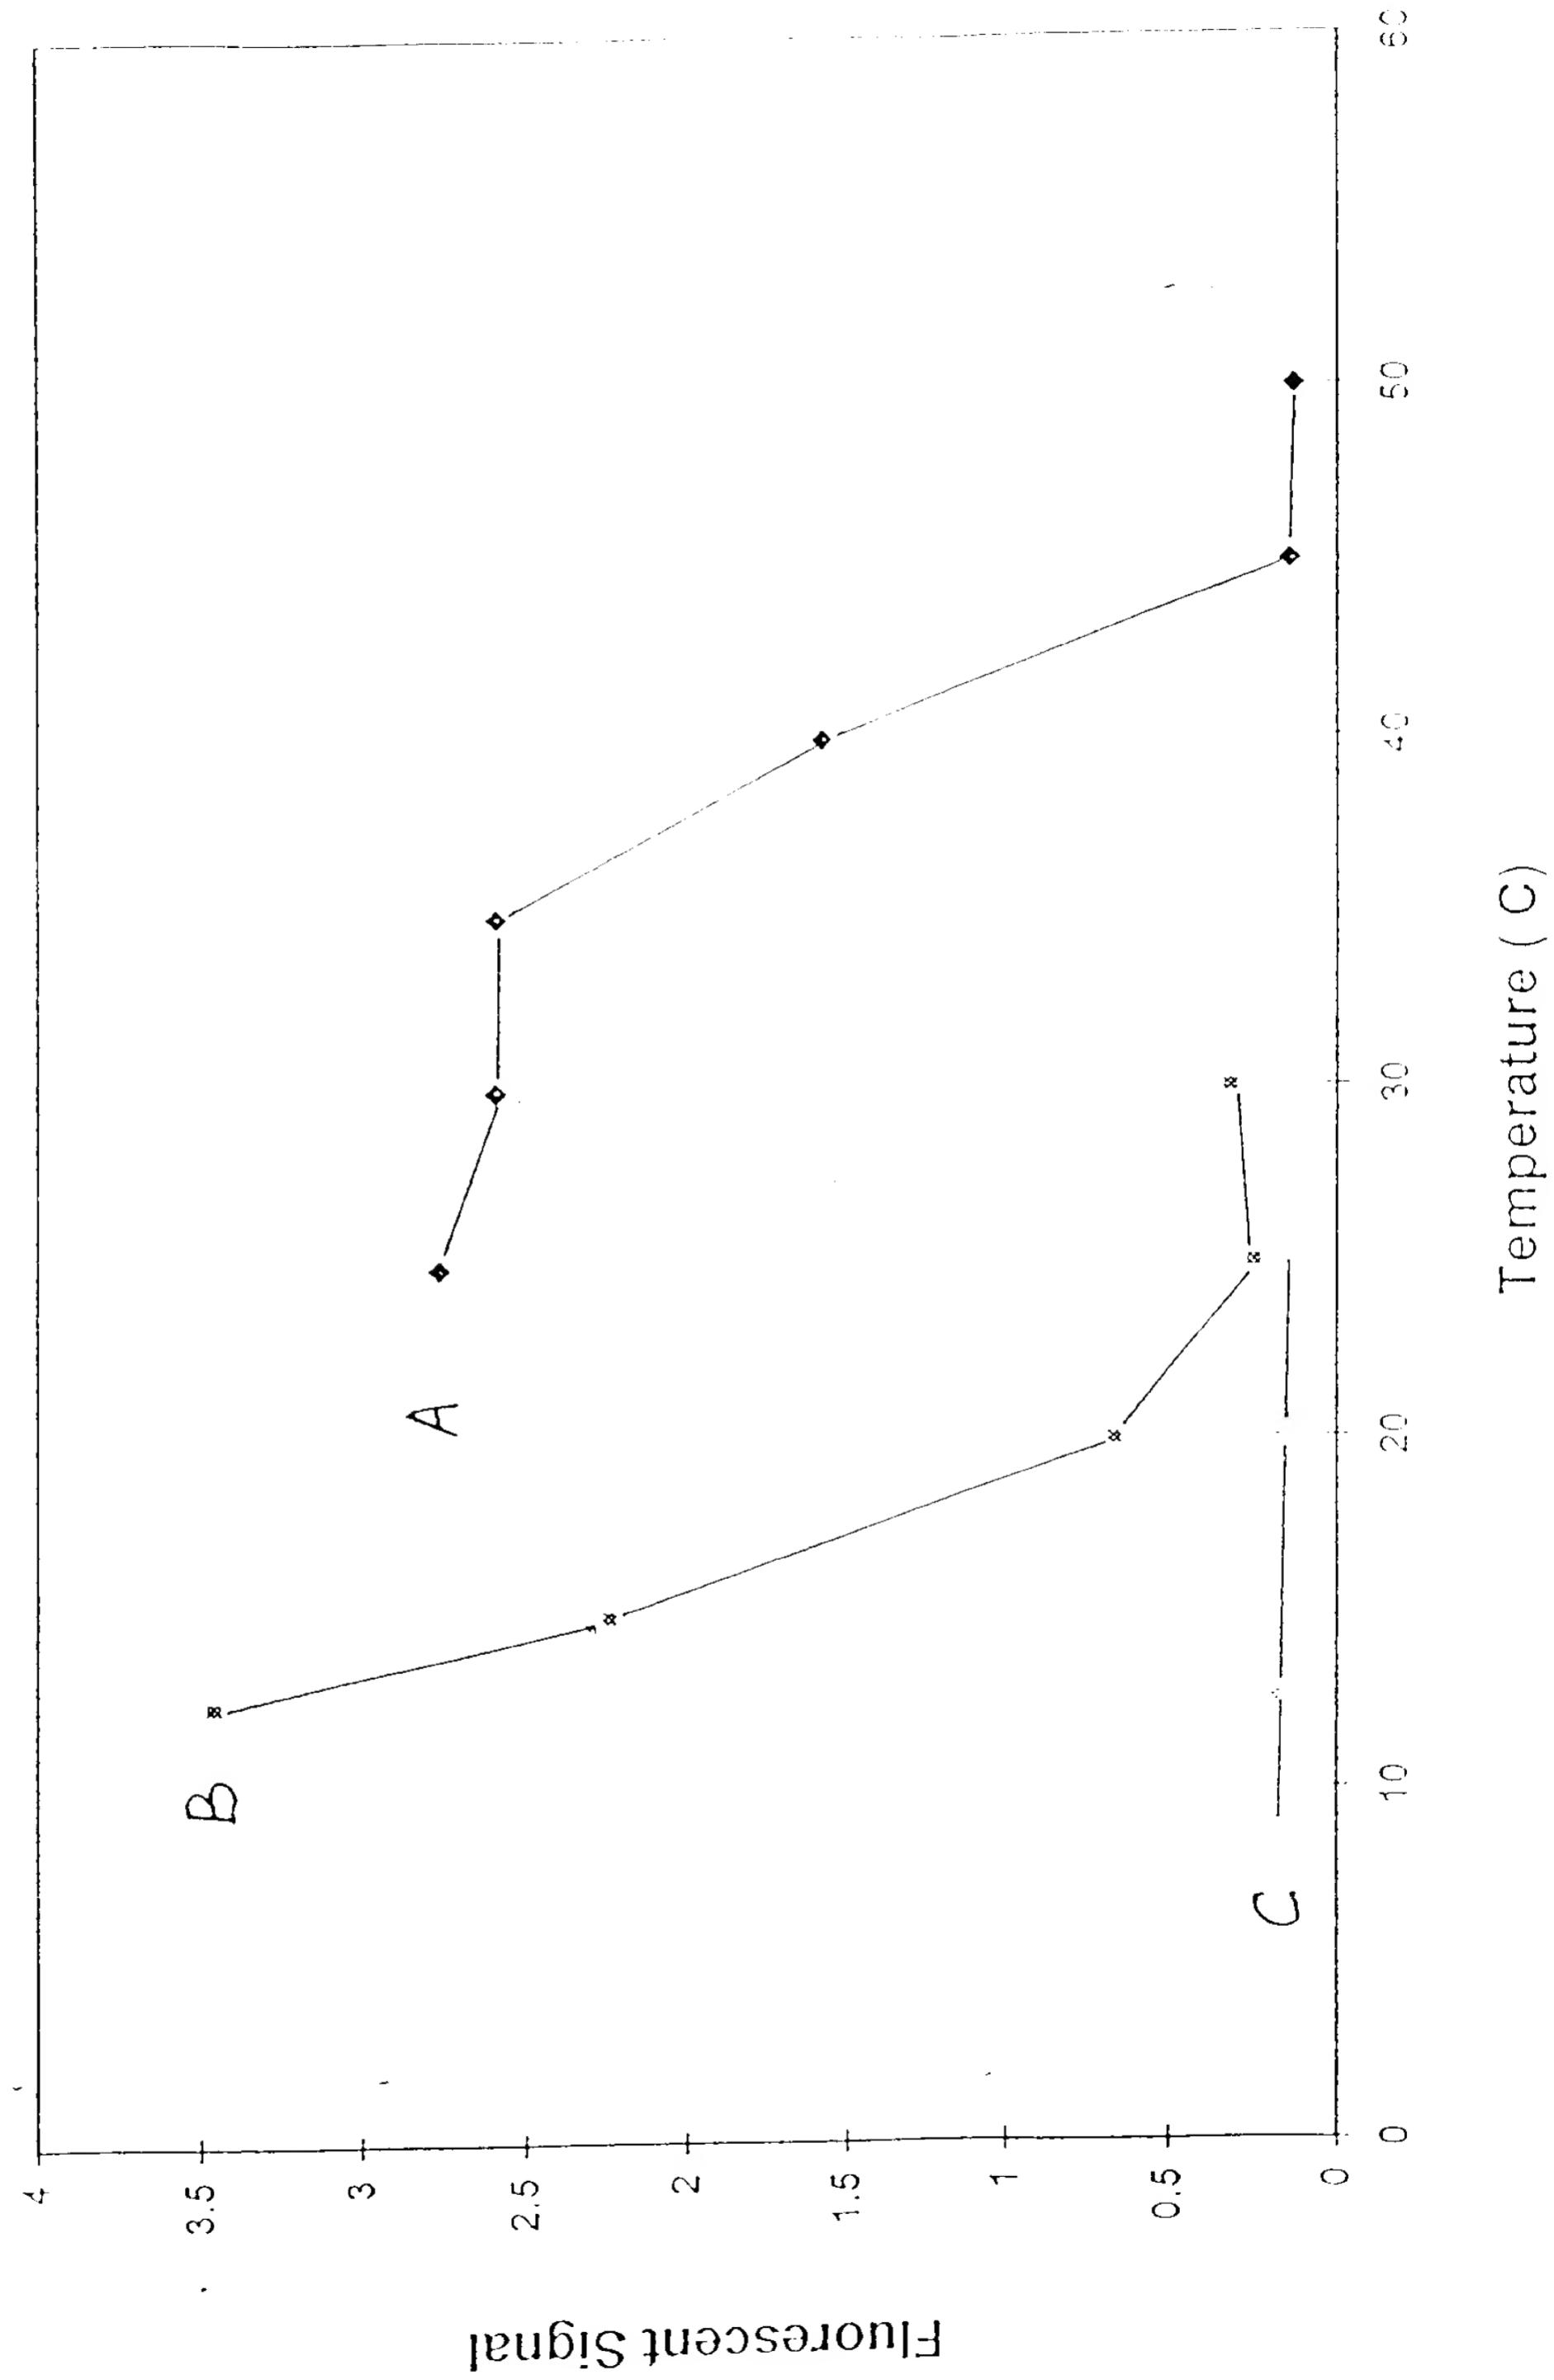


726093

FIGURE 6




FIGURE 7

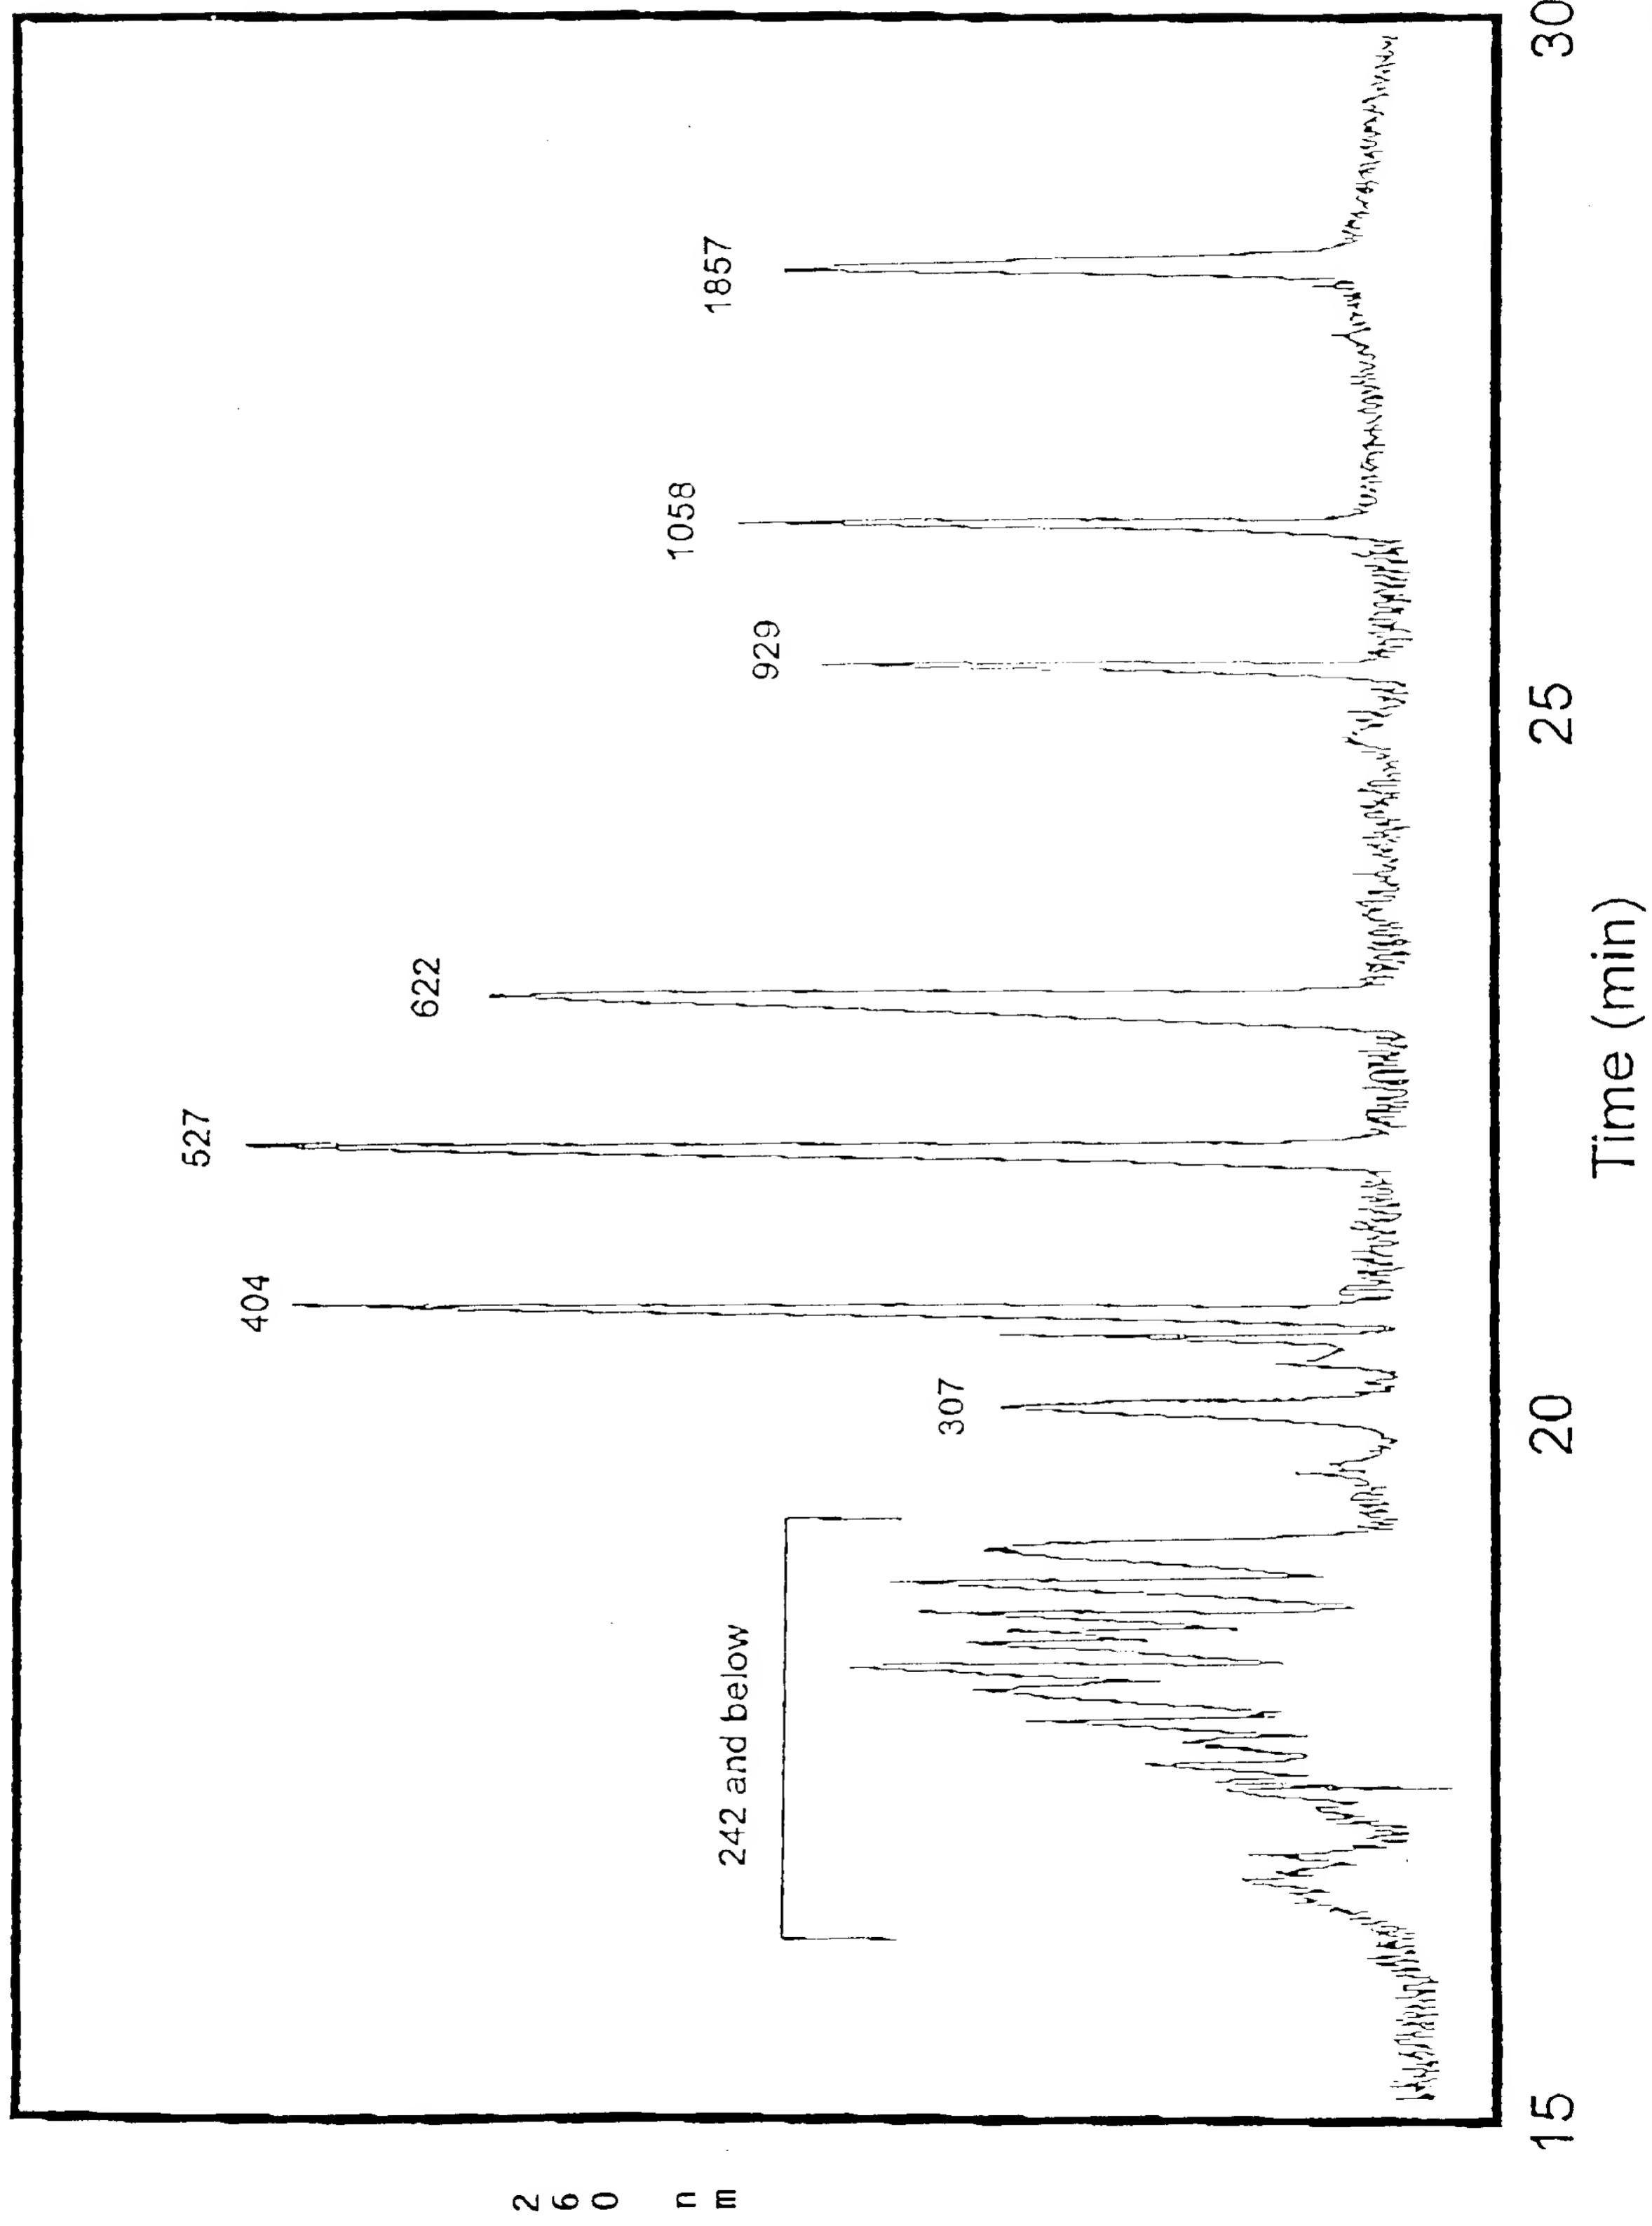

726093

FIGURE 8

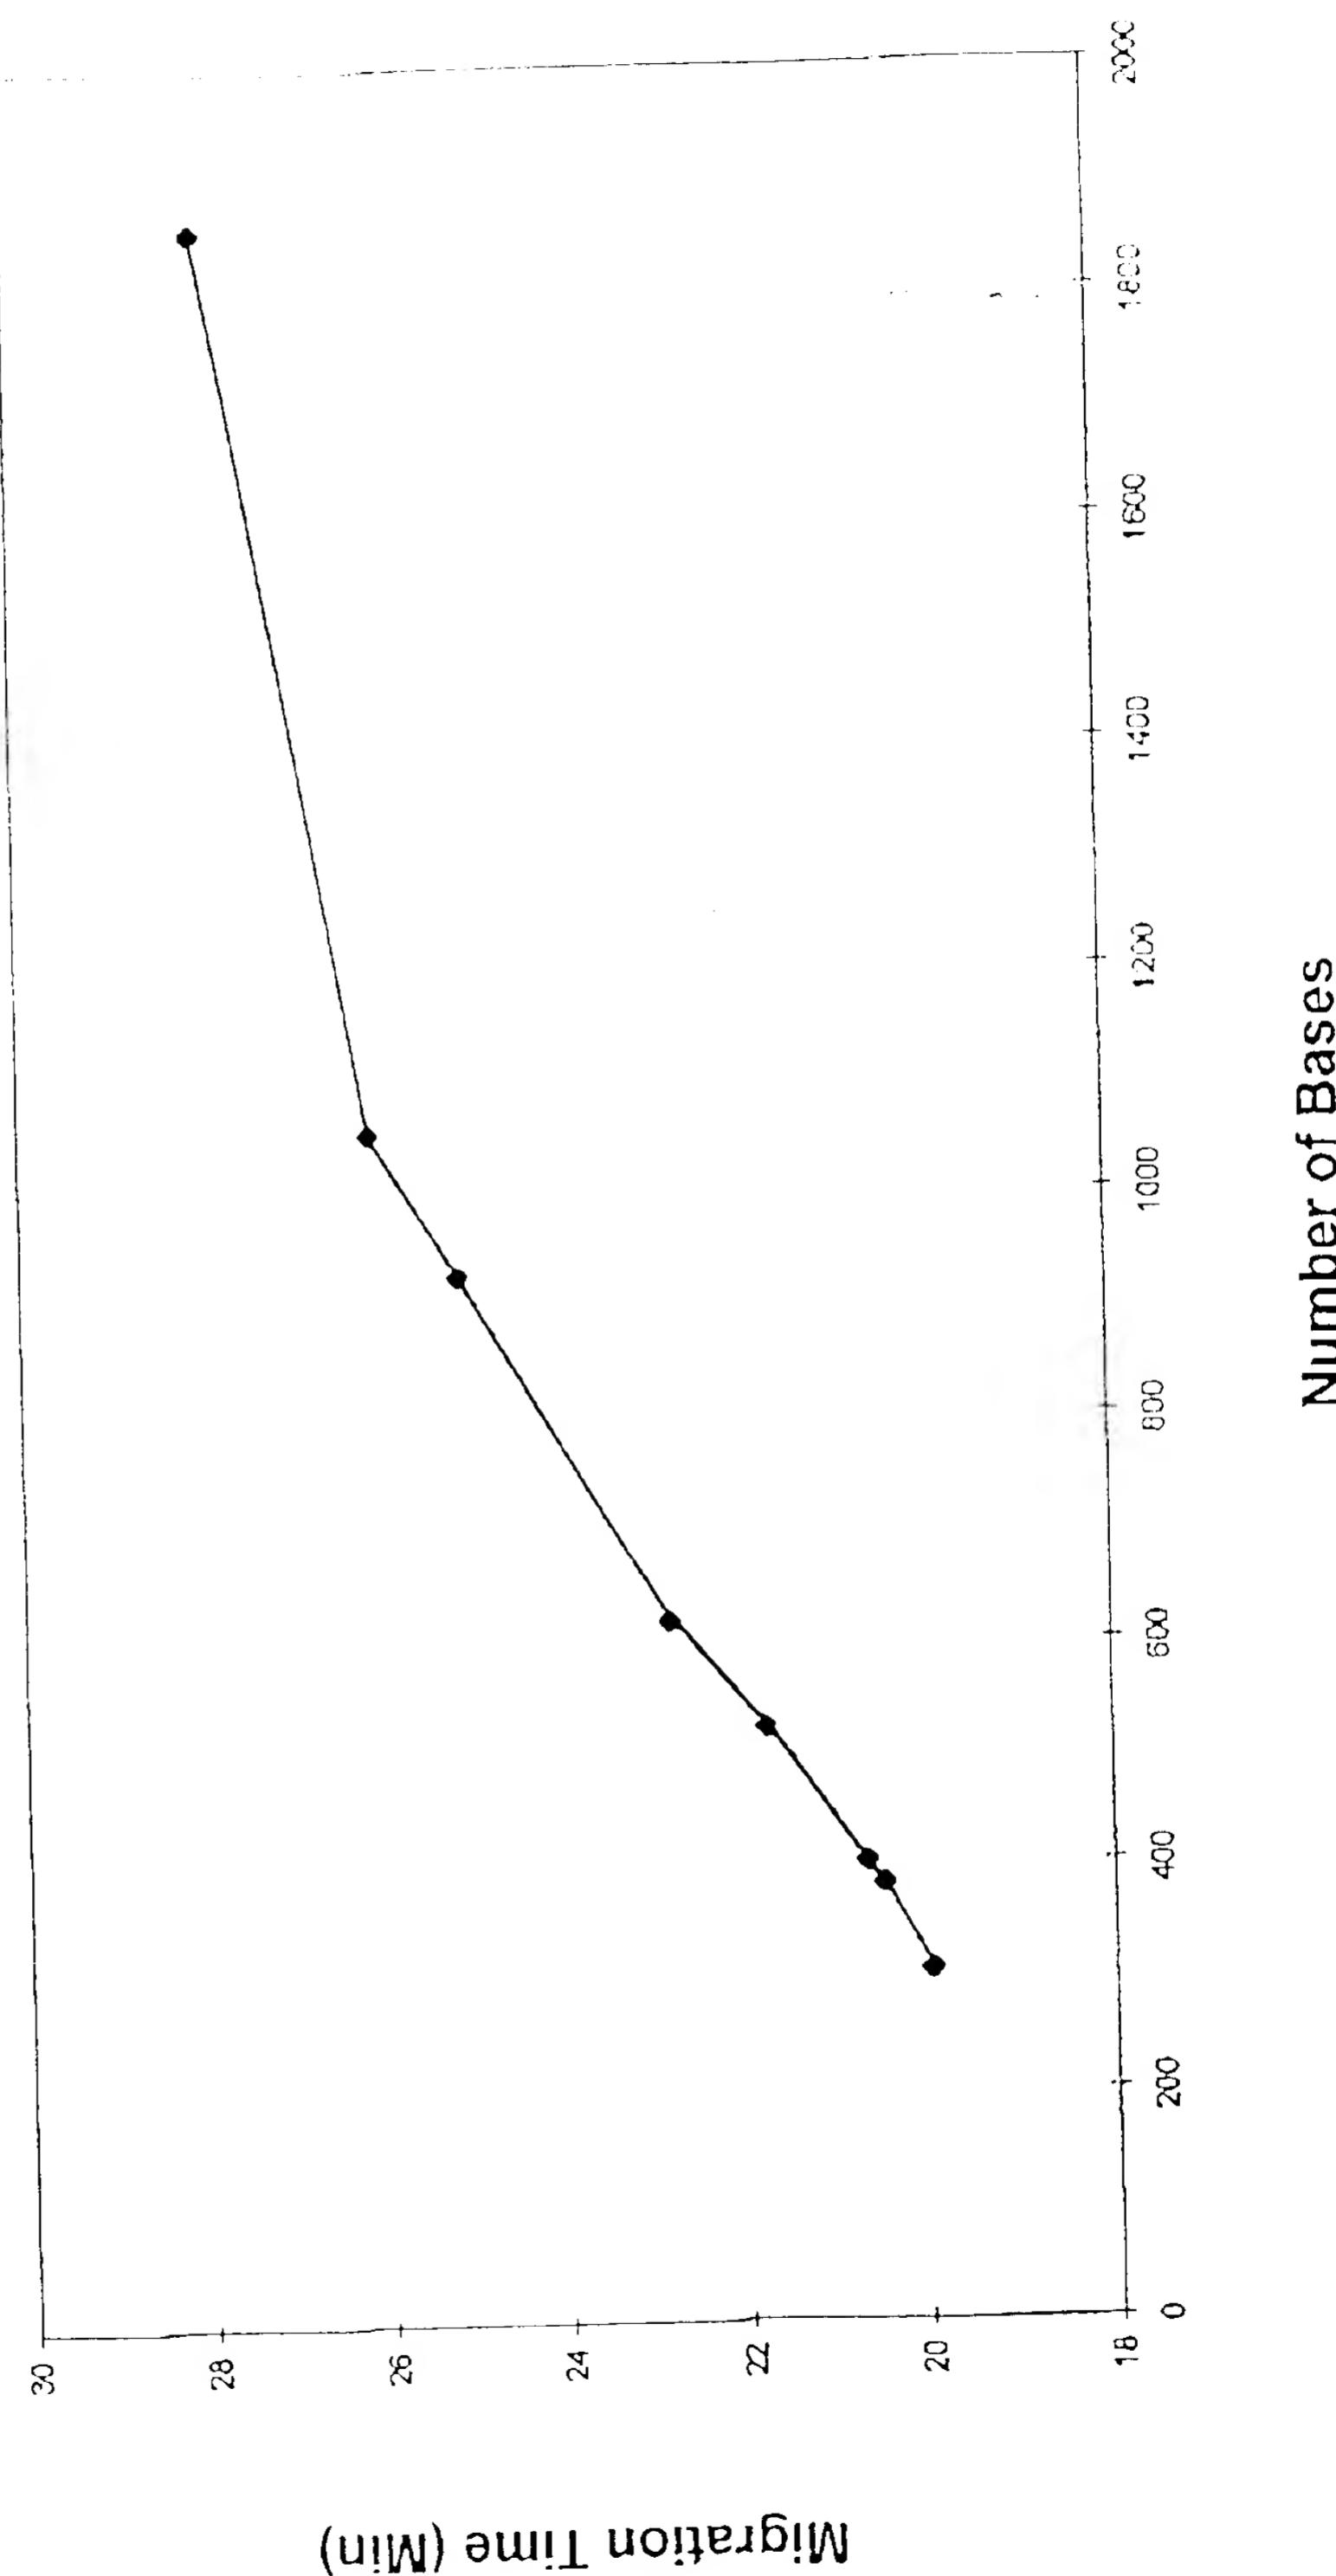

726093

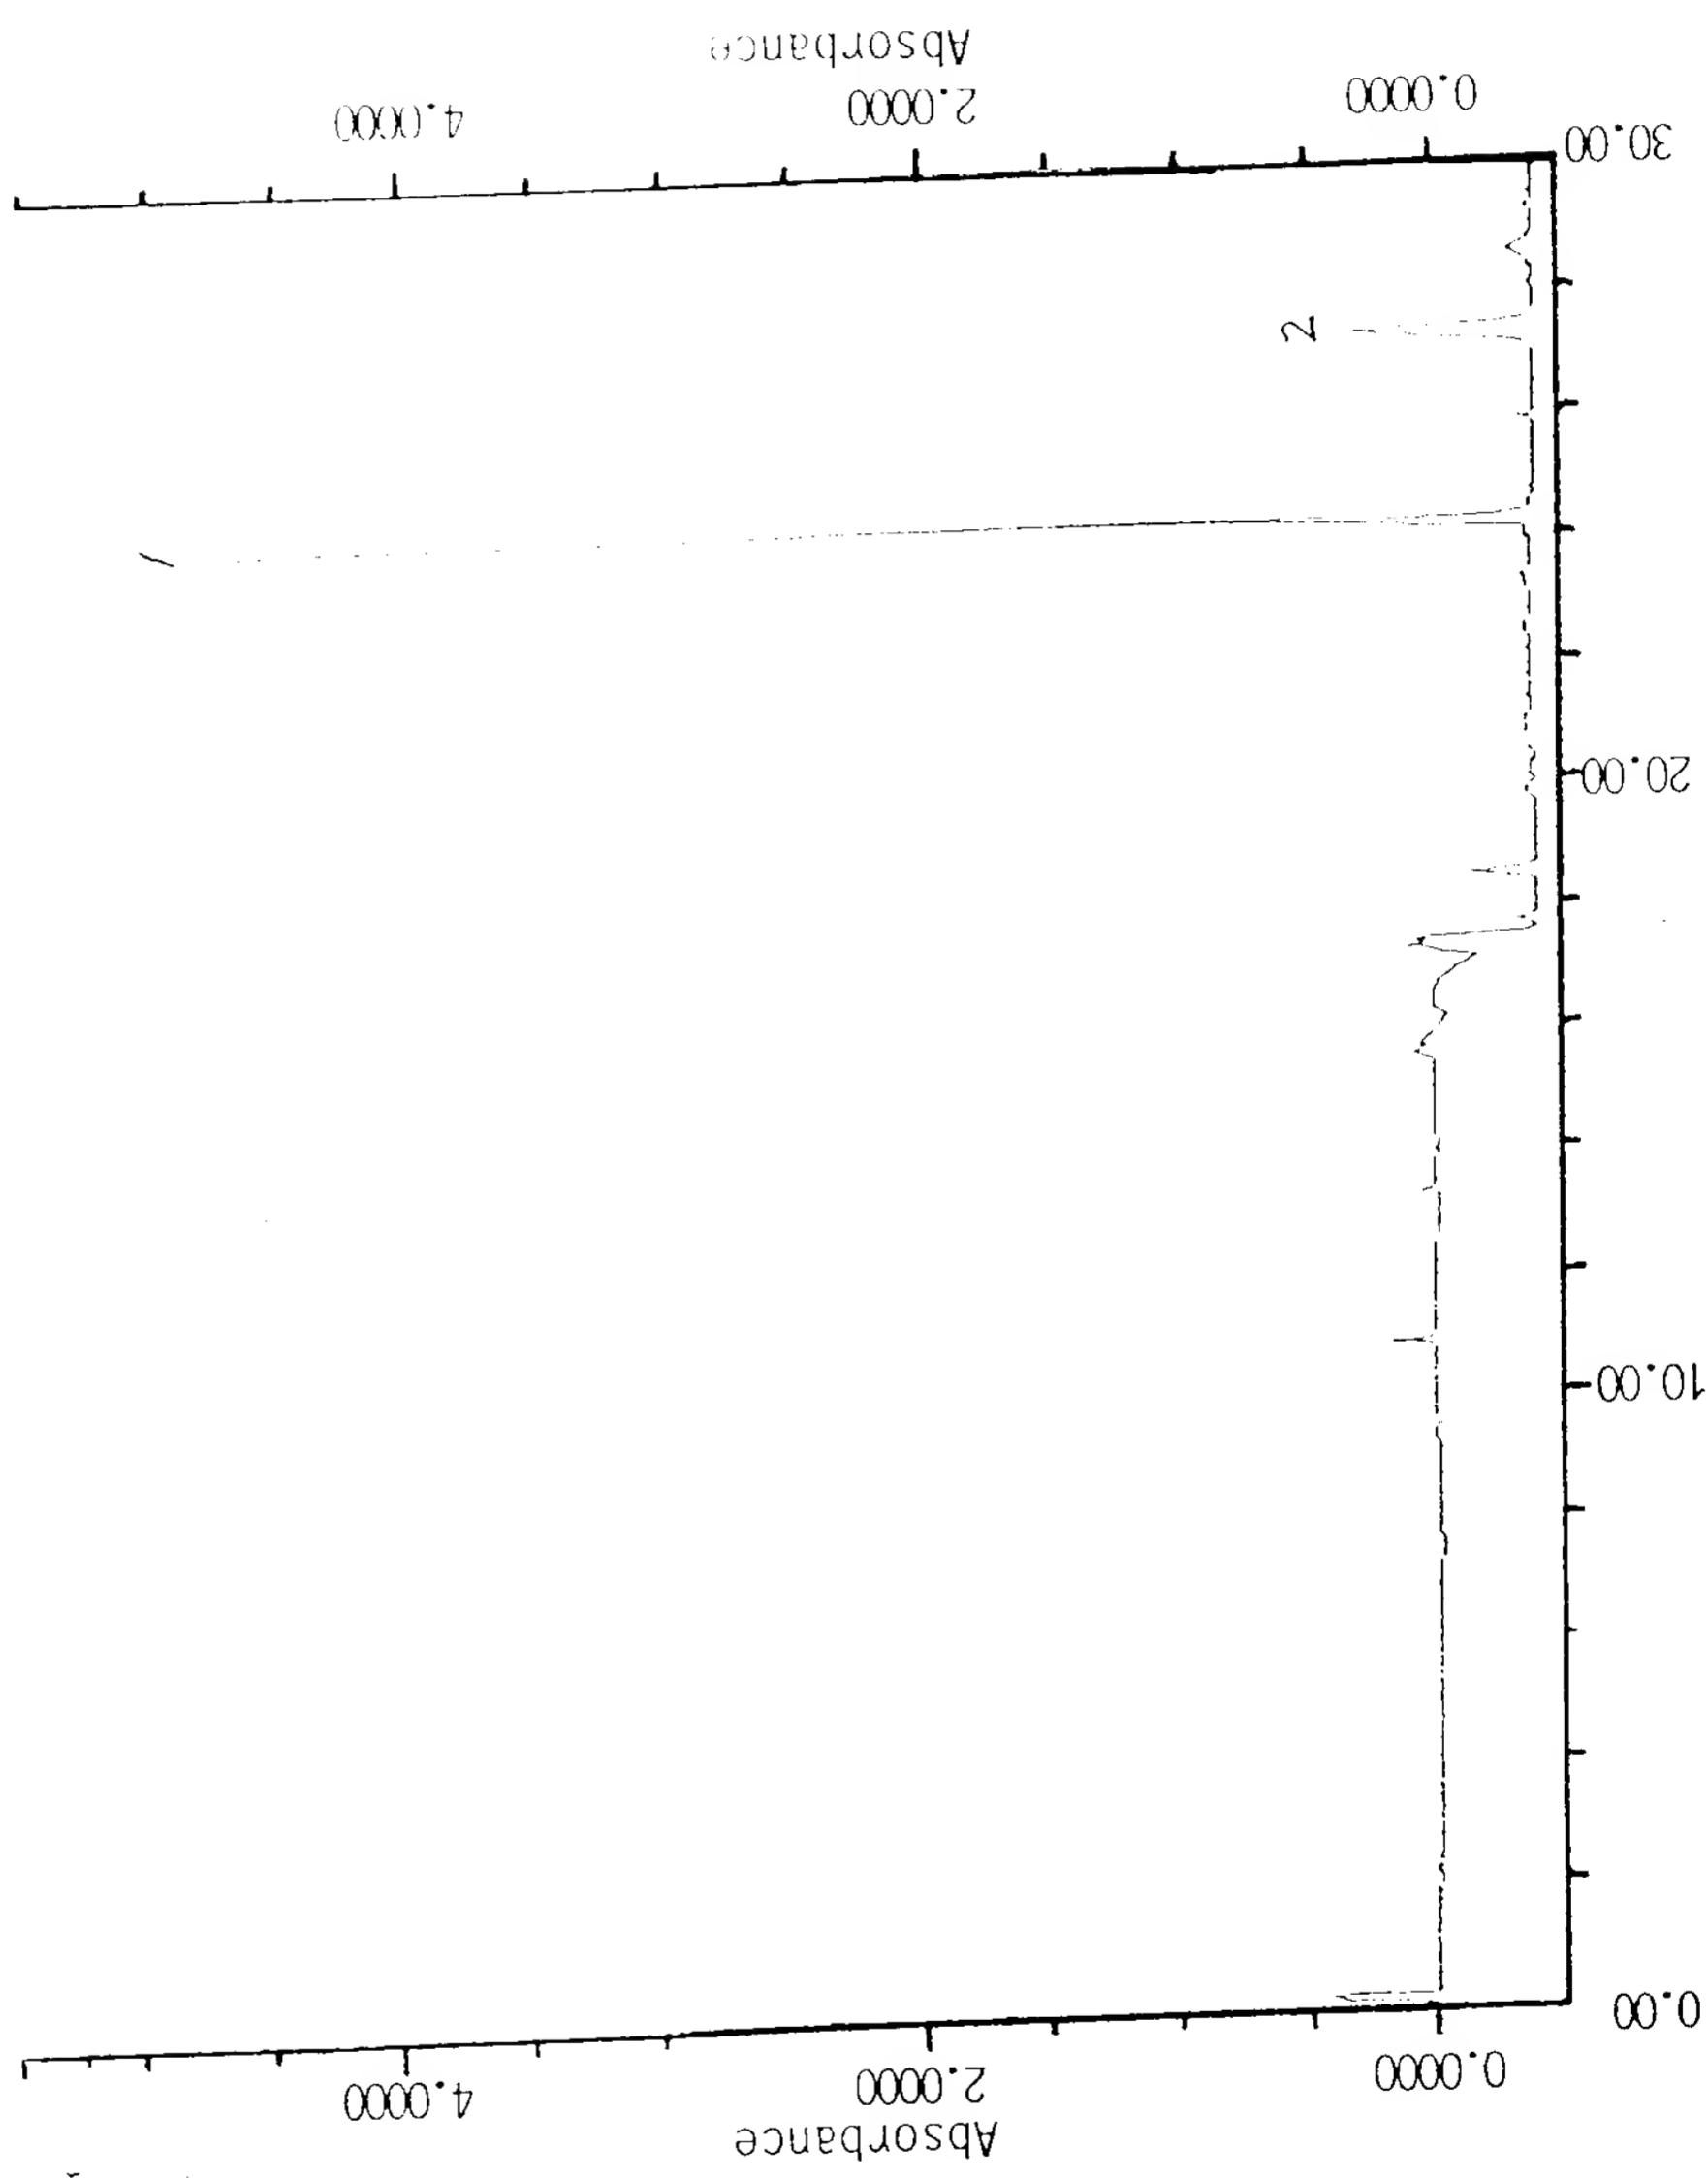


FIGURE 9

08 726093


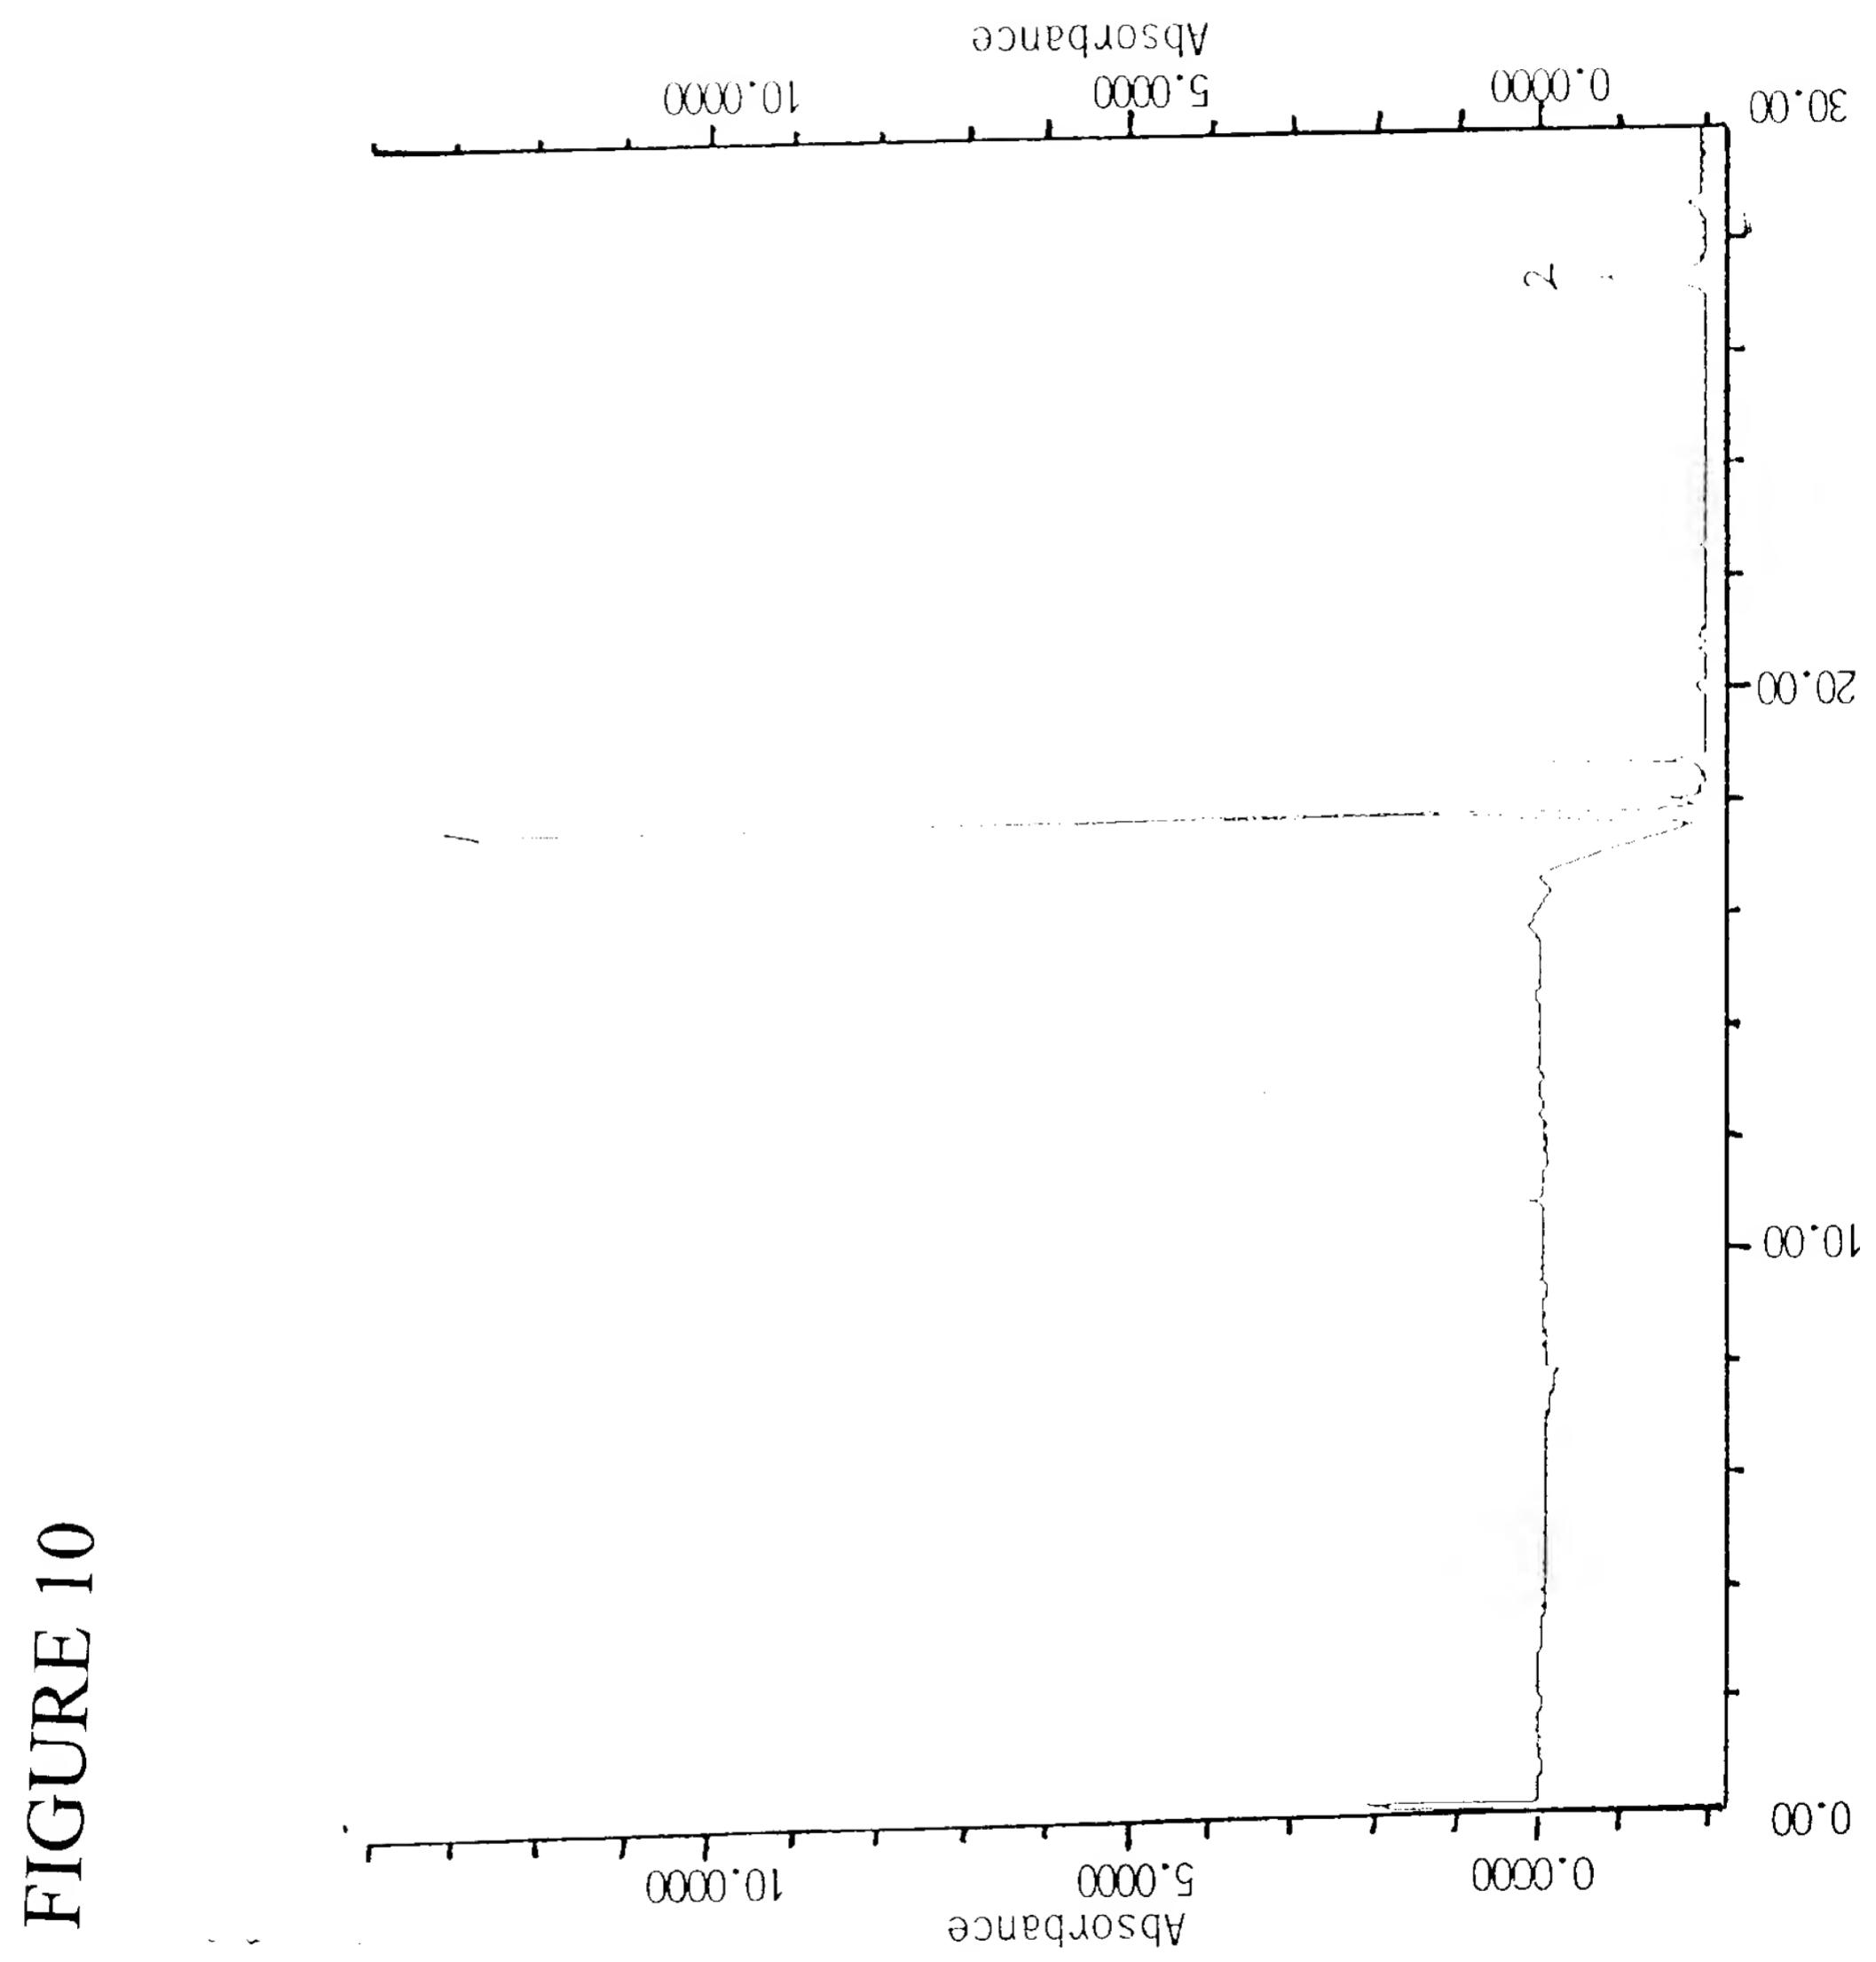


FIGURE 10

726093

FIGURE 11

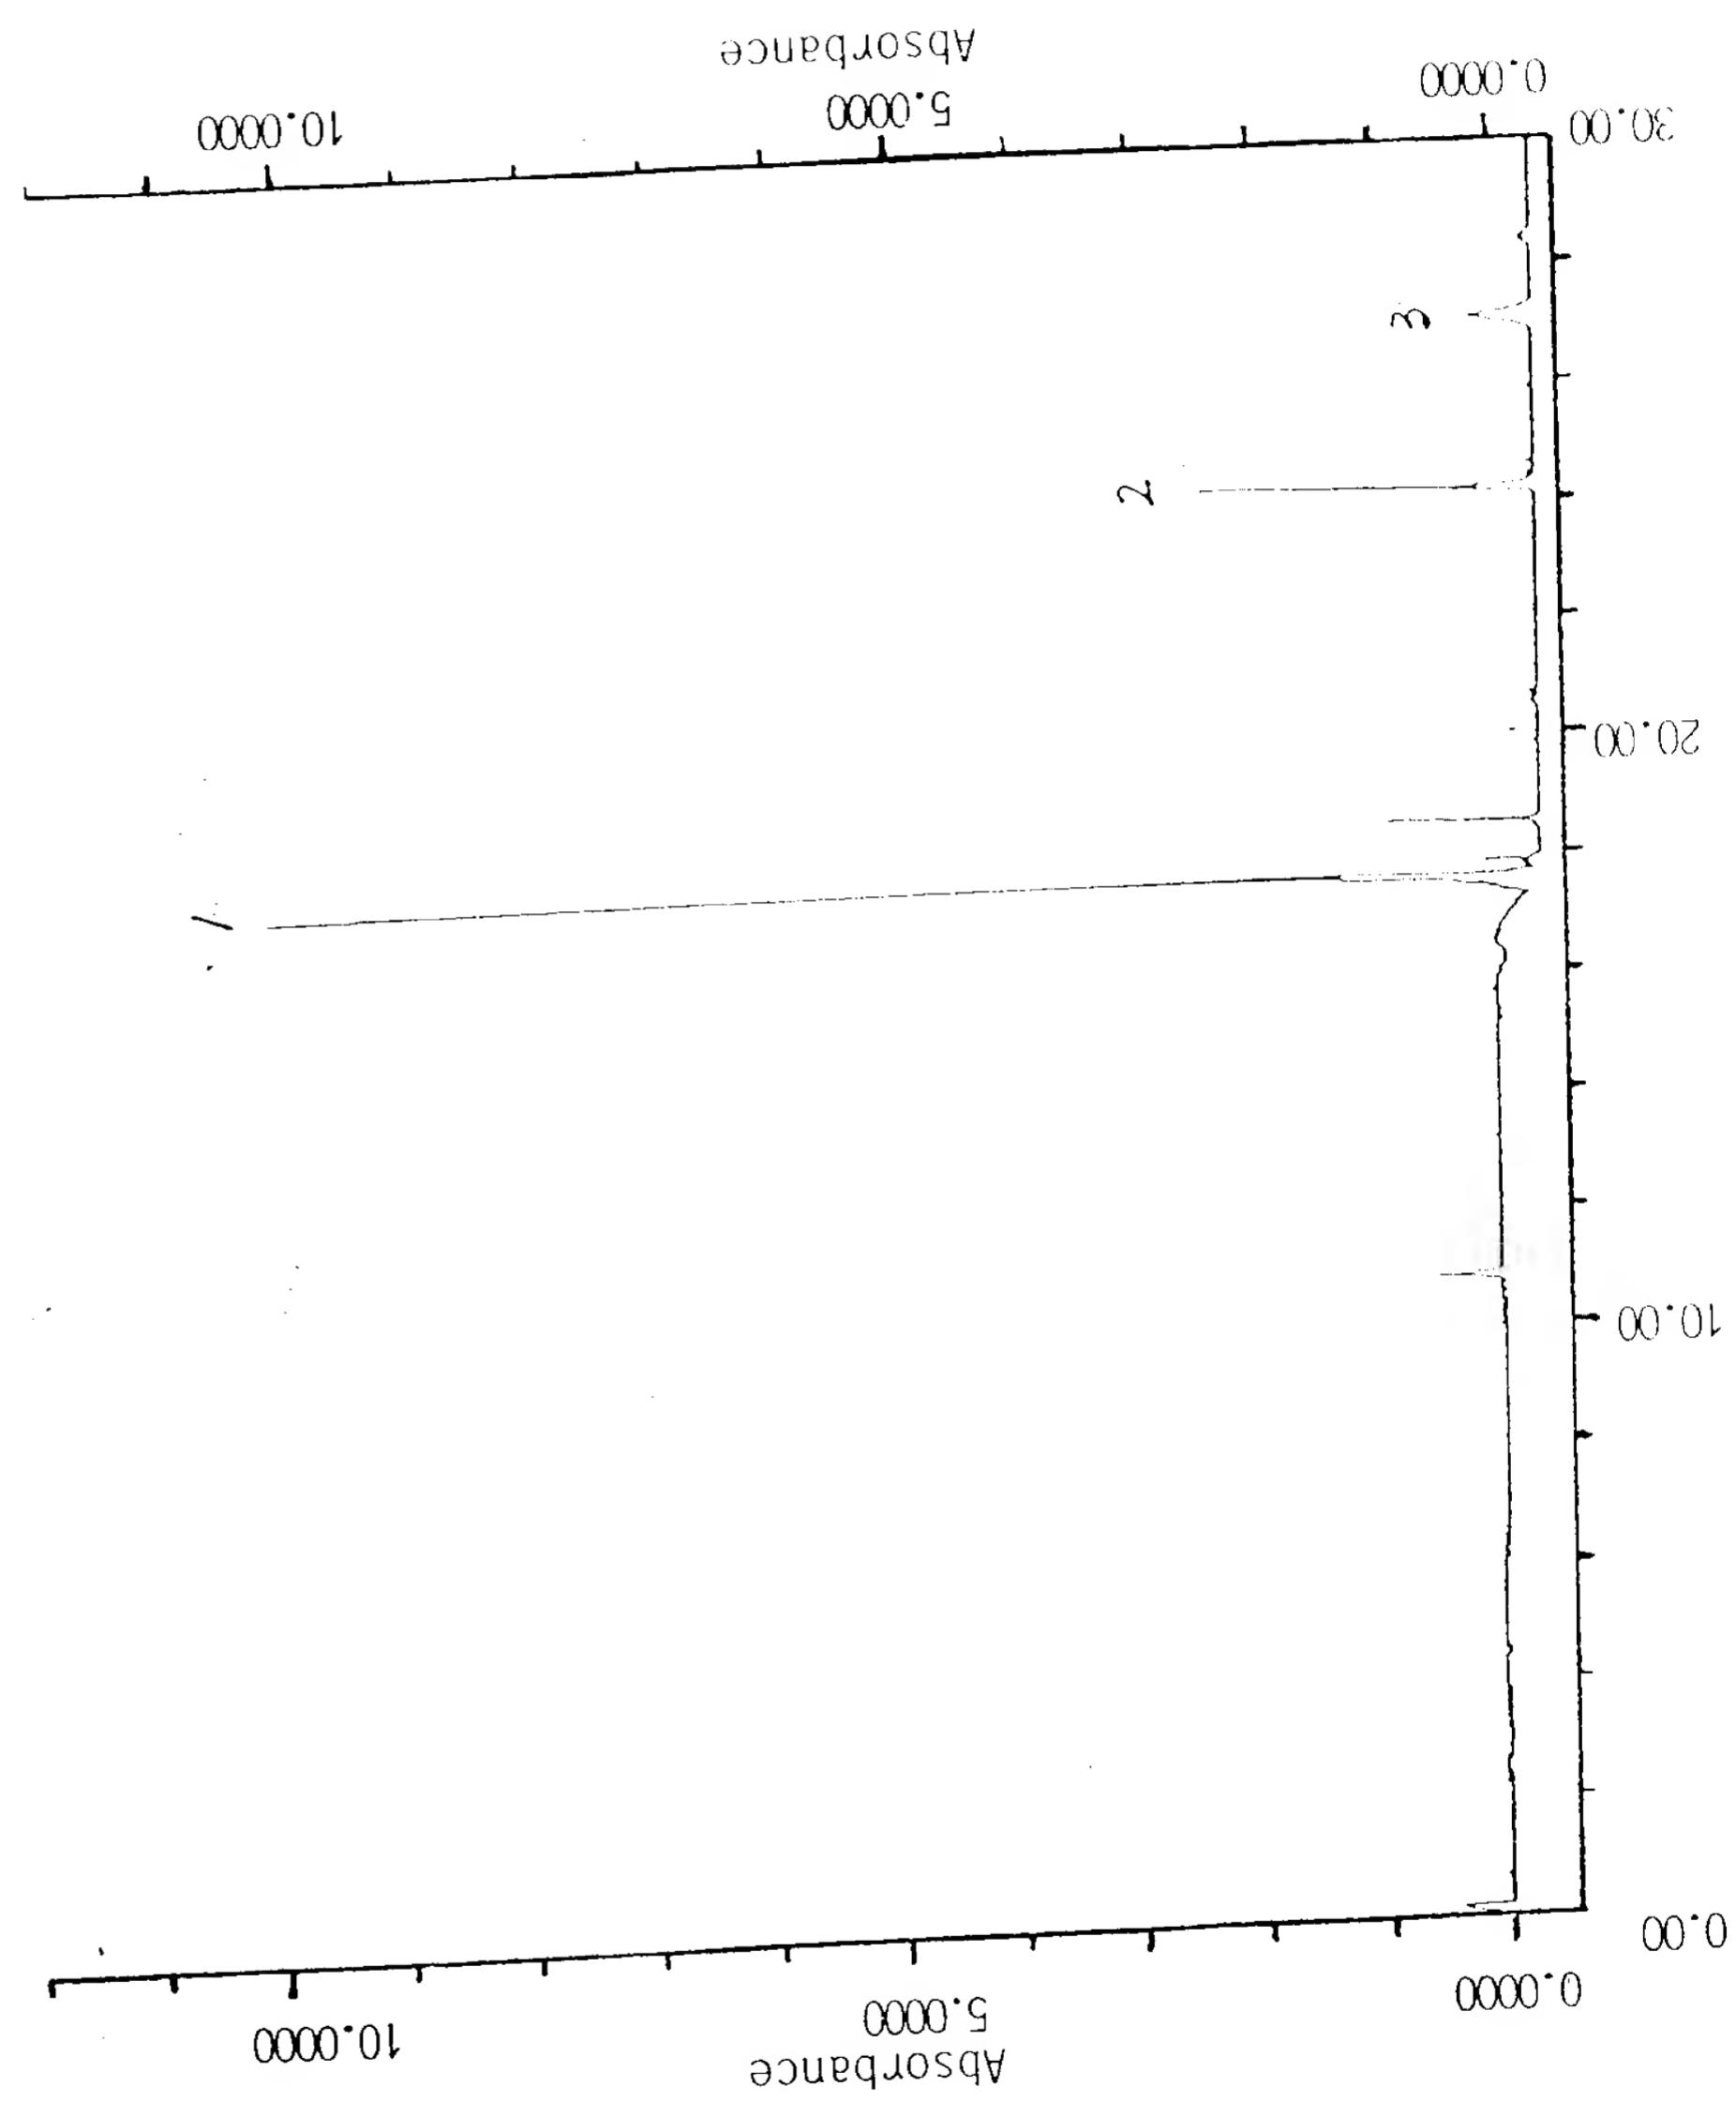

08 726093

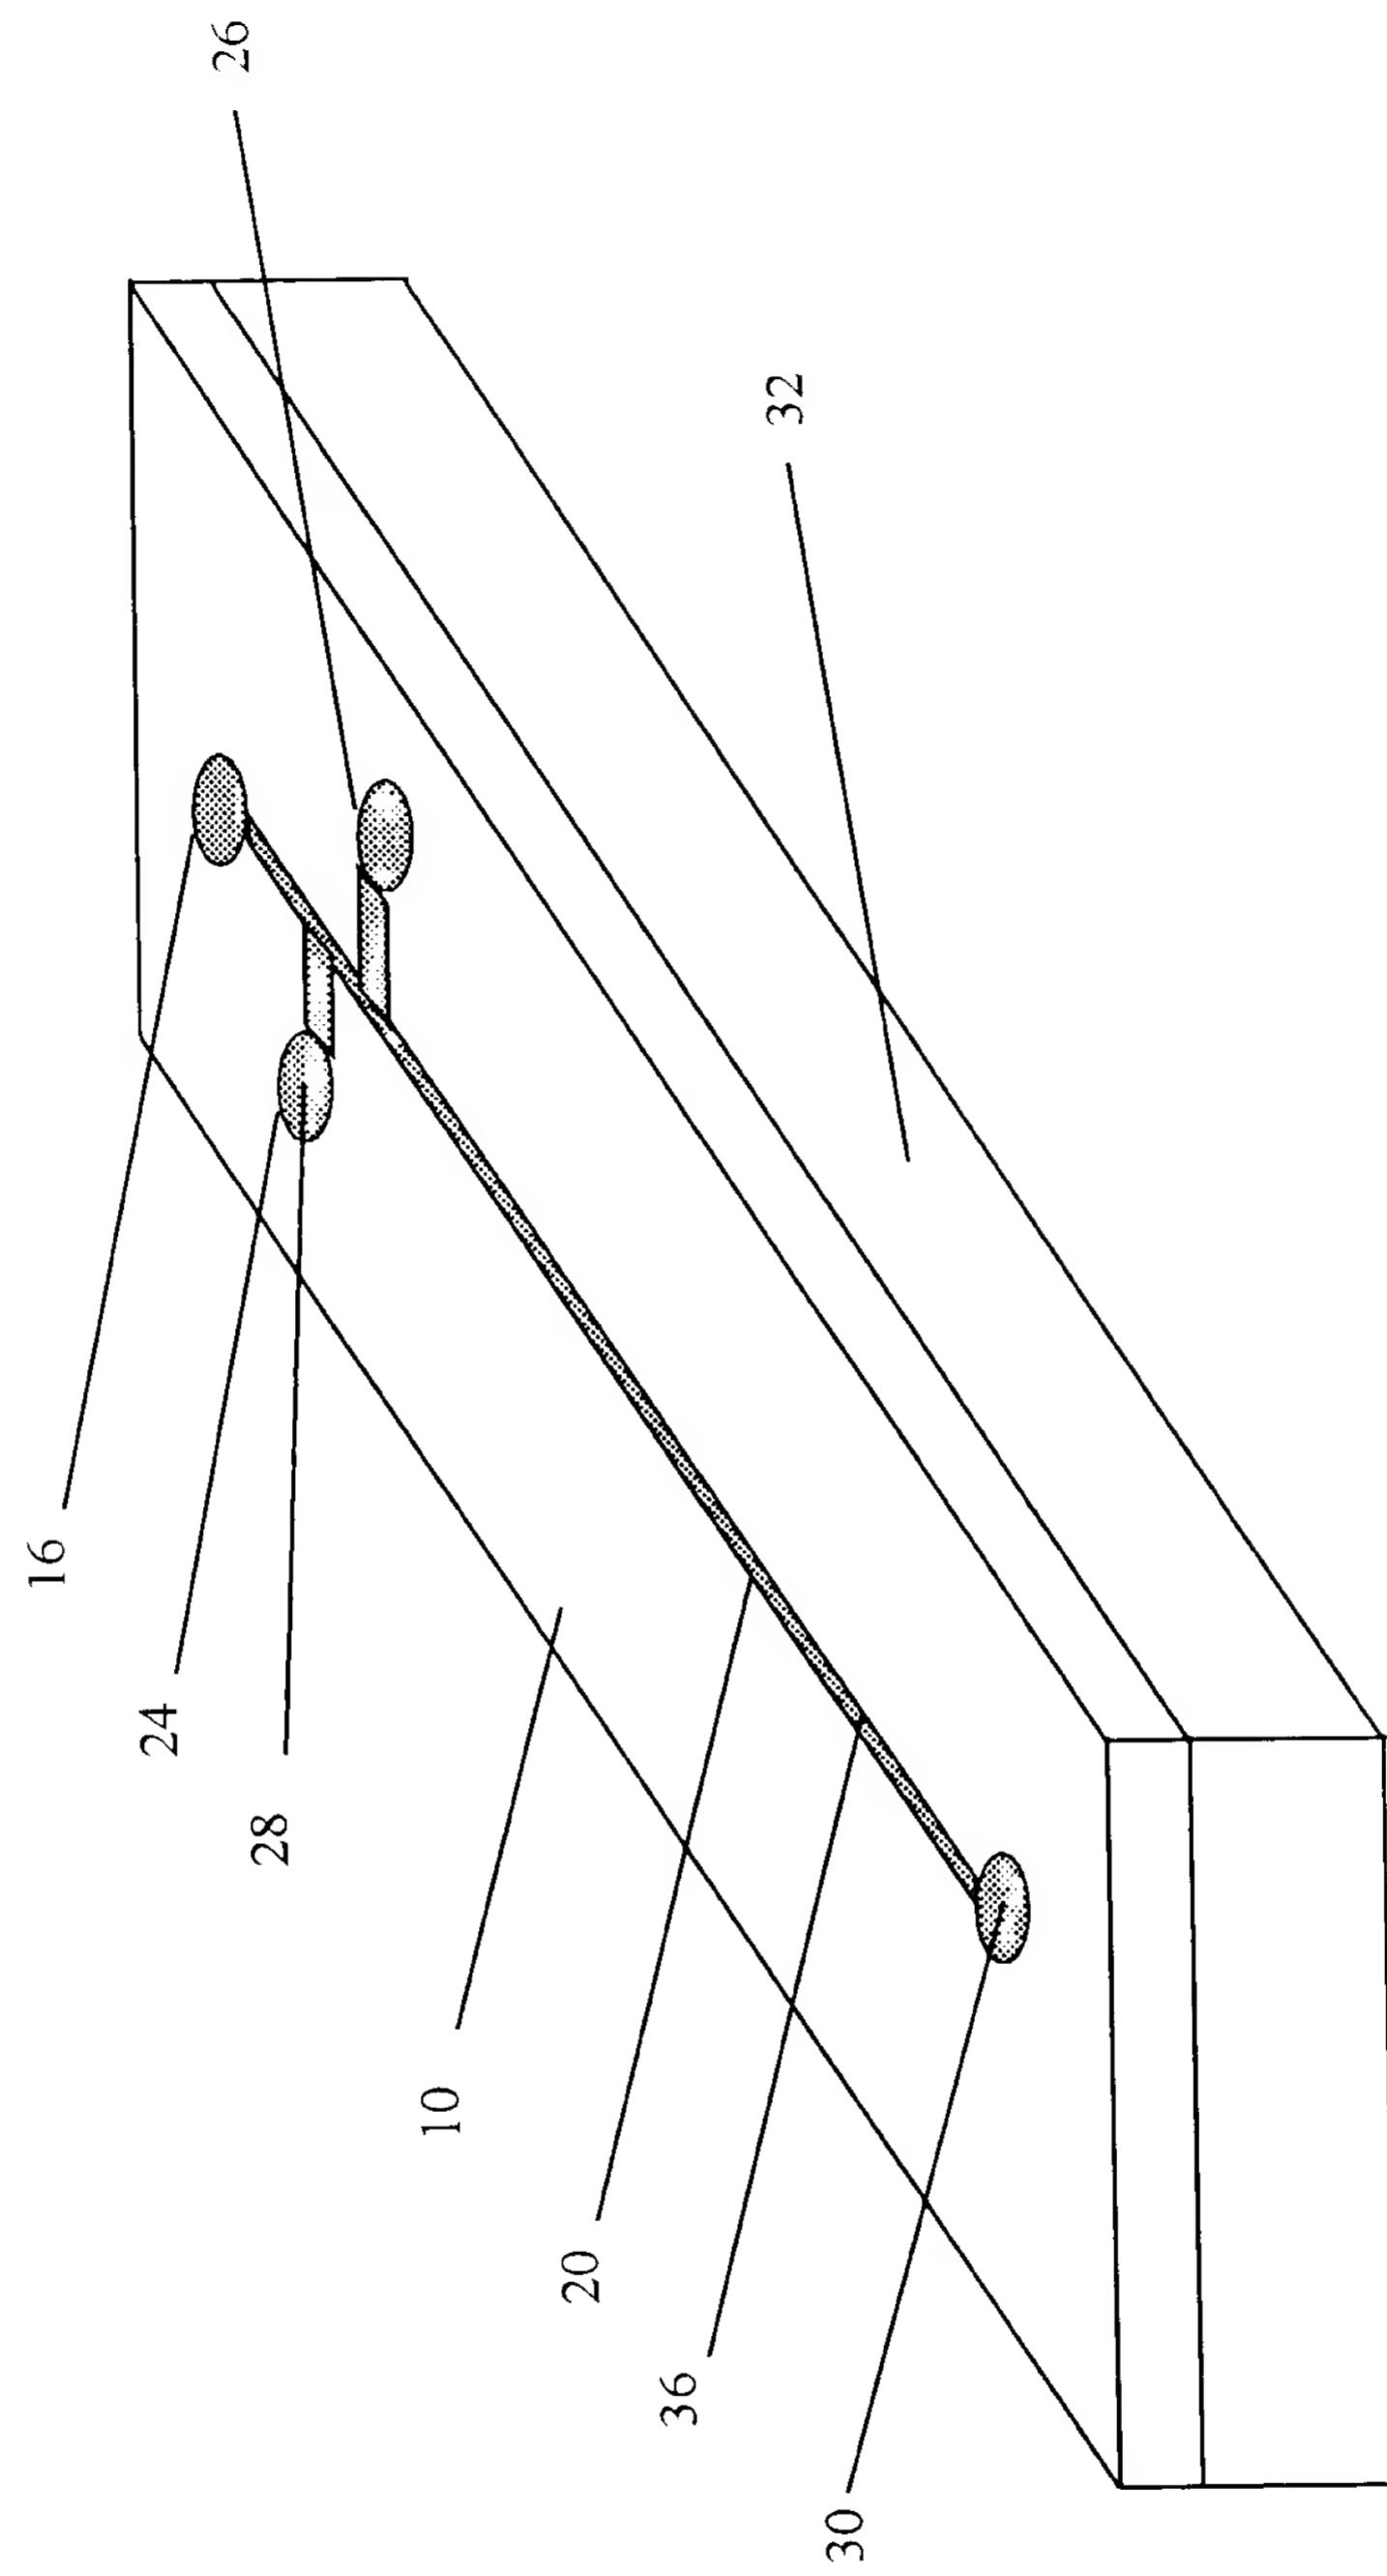


FIGURE 12

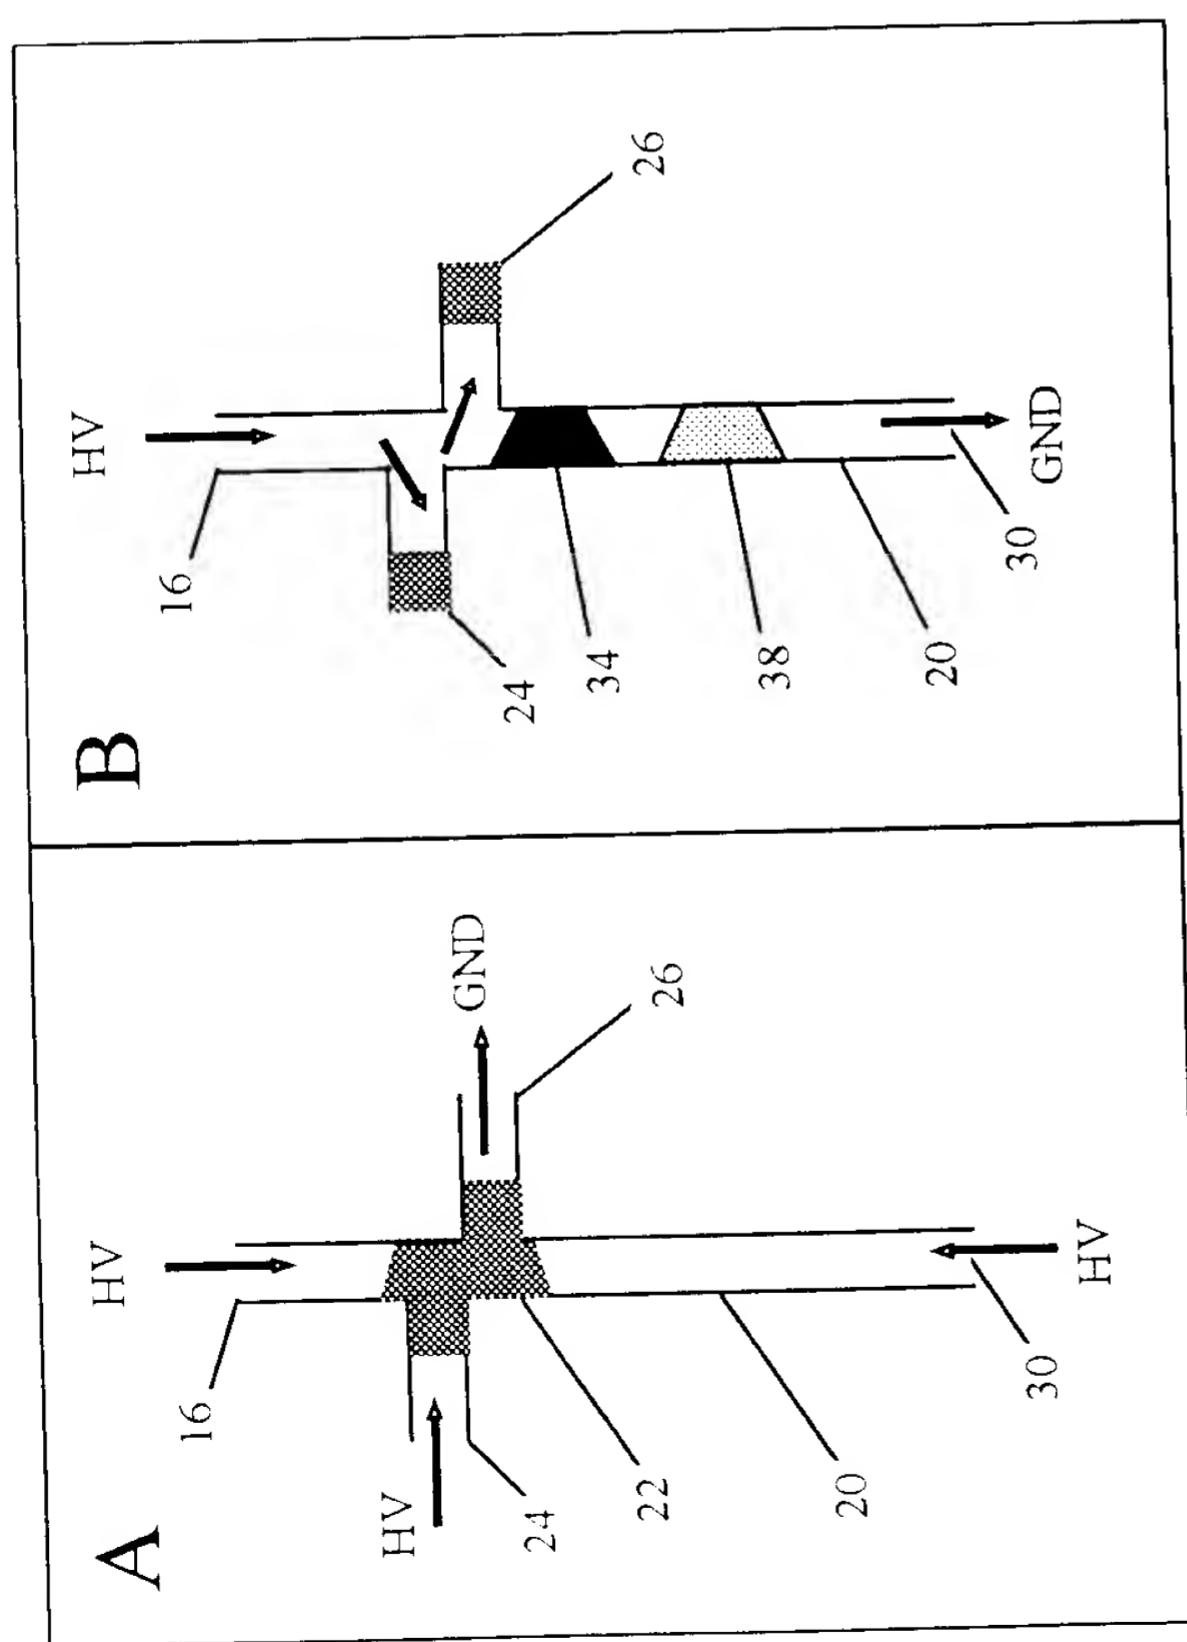


FIGURE 13

726093

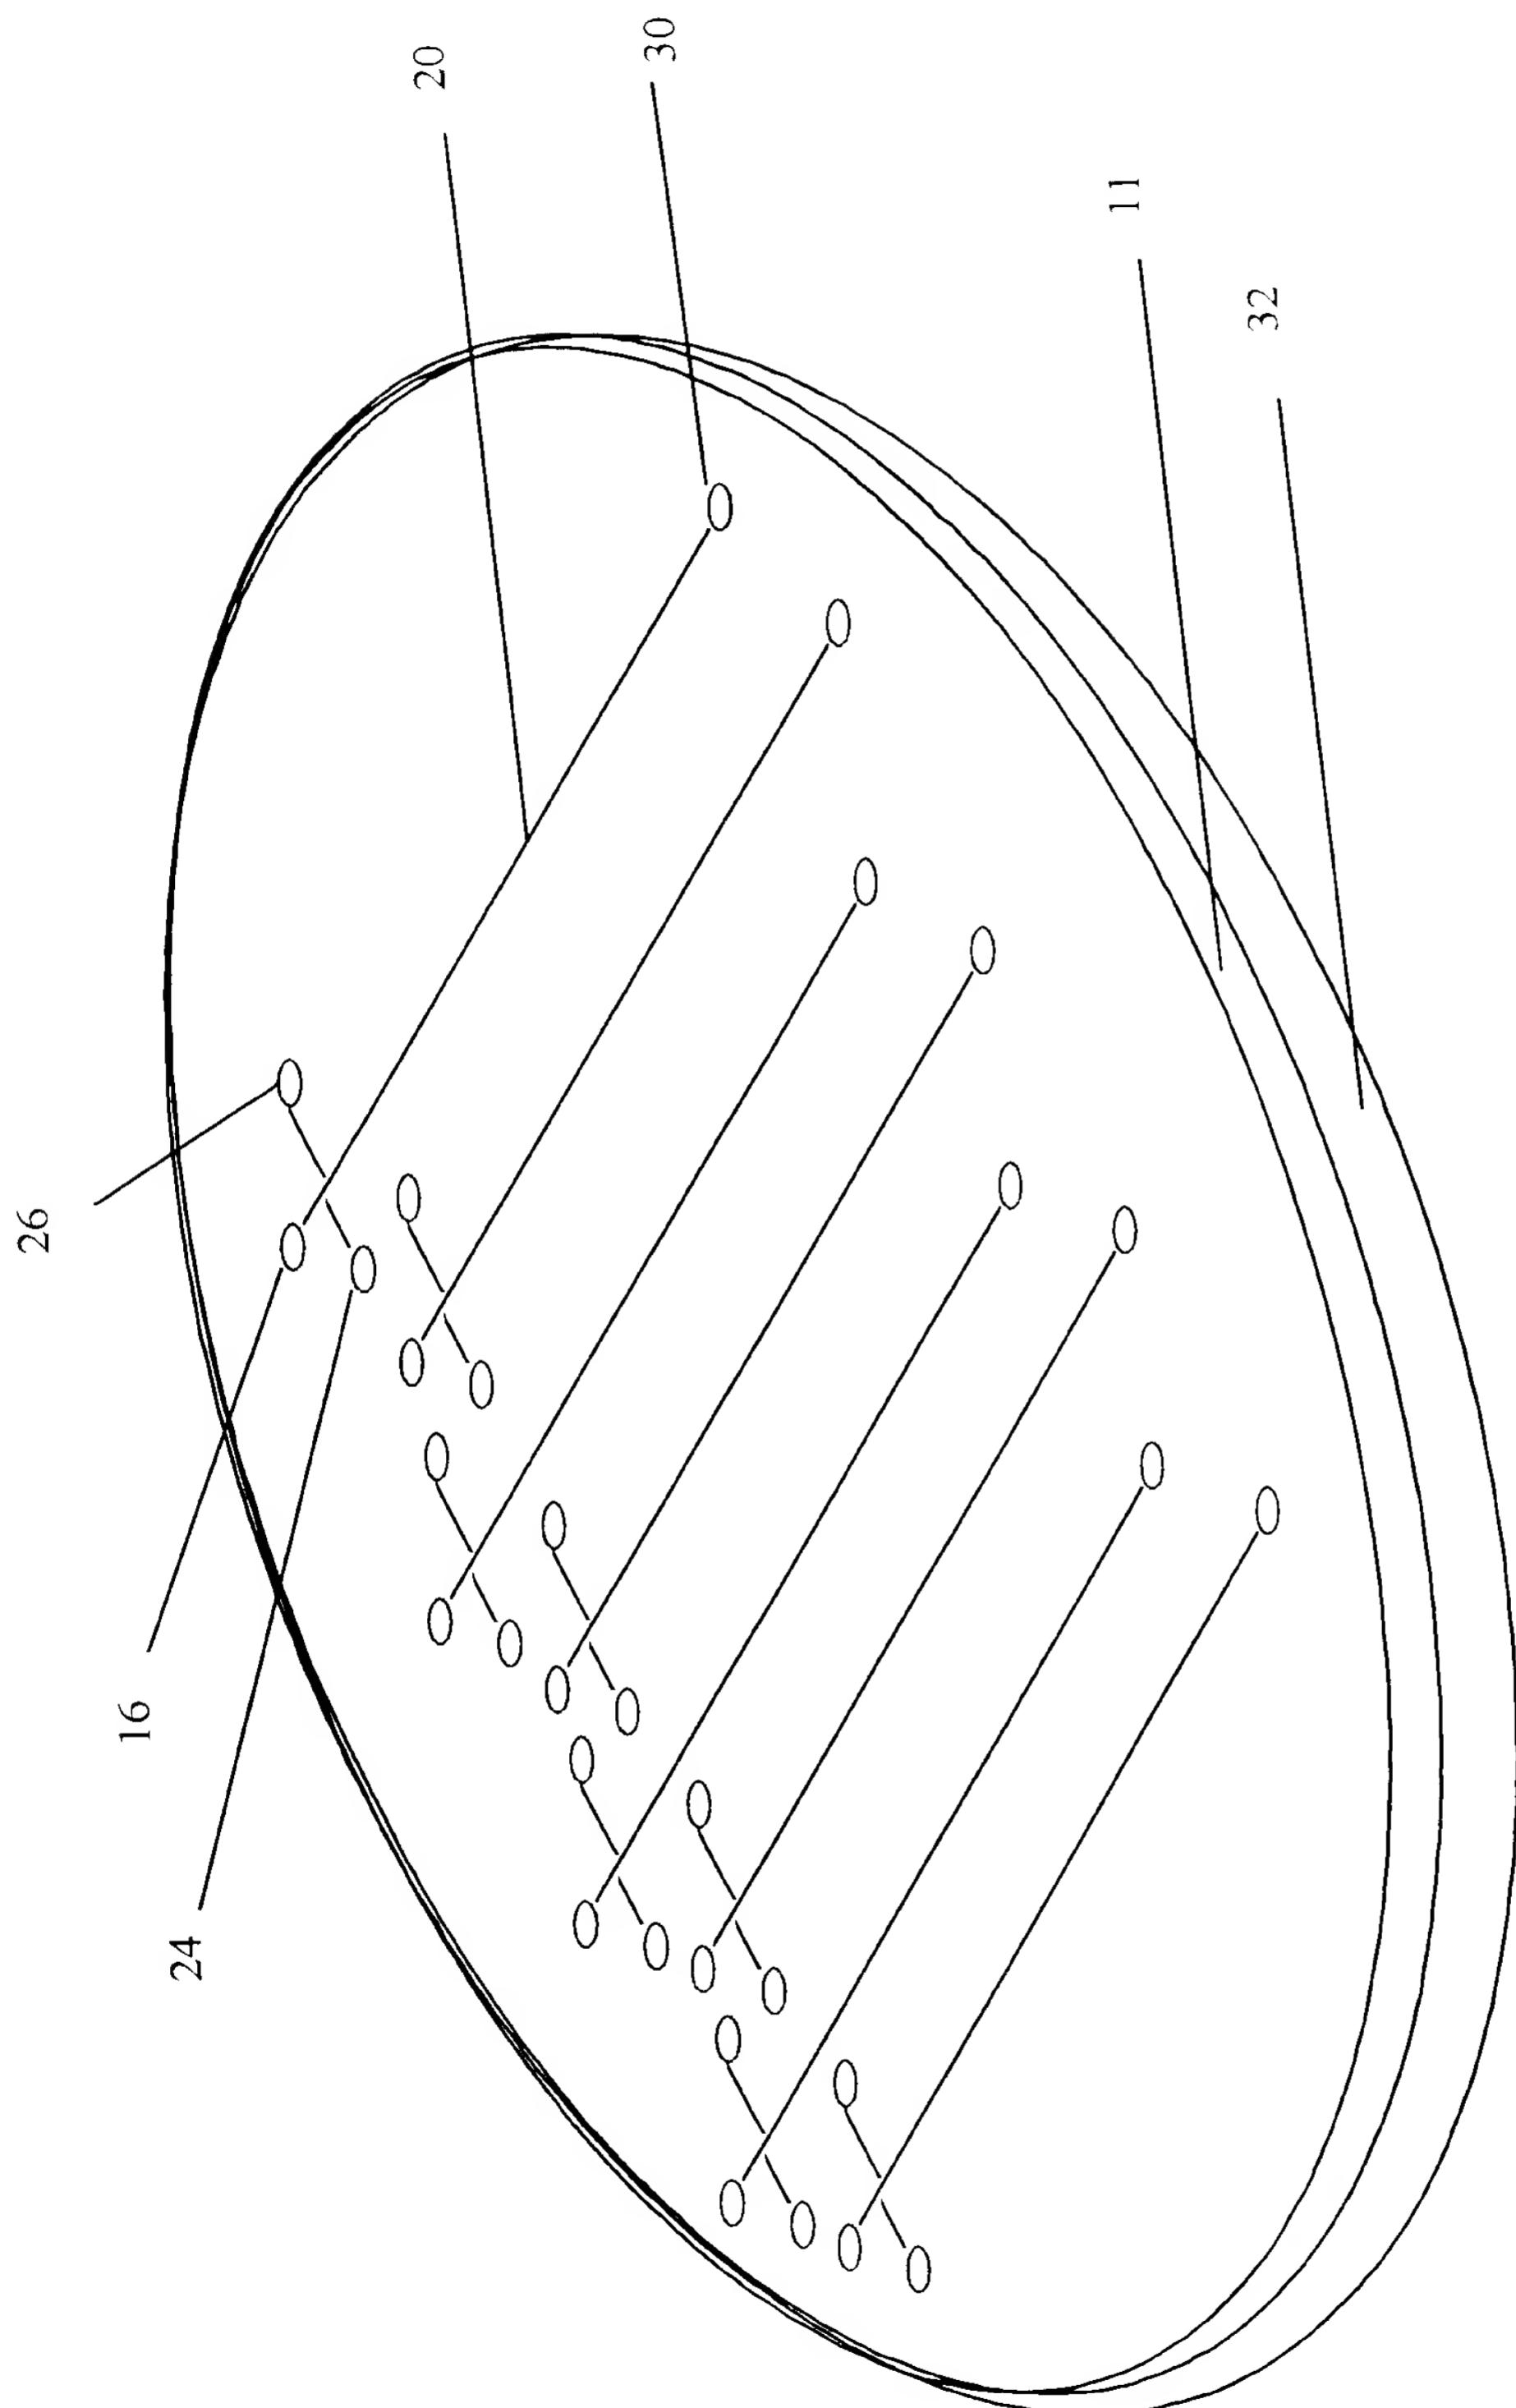


FIGURE 14


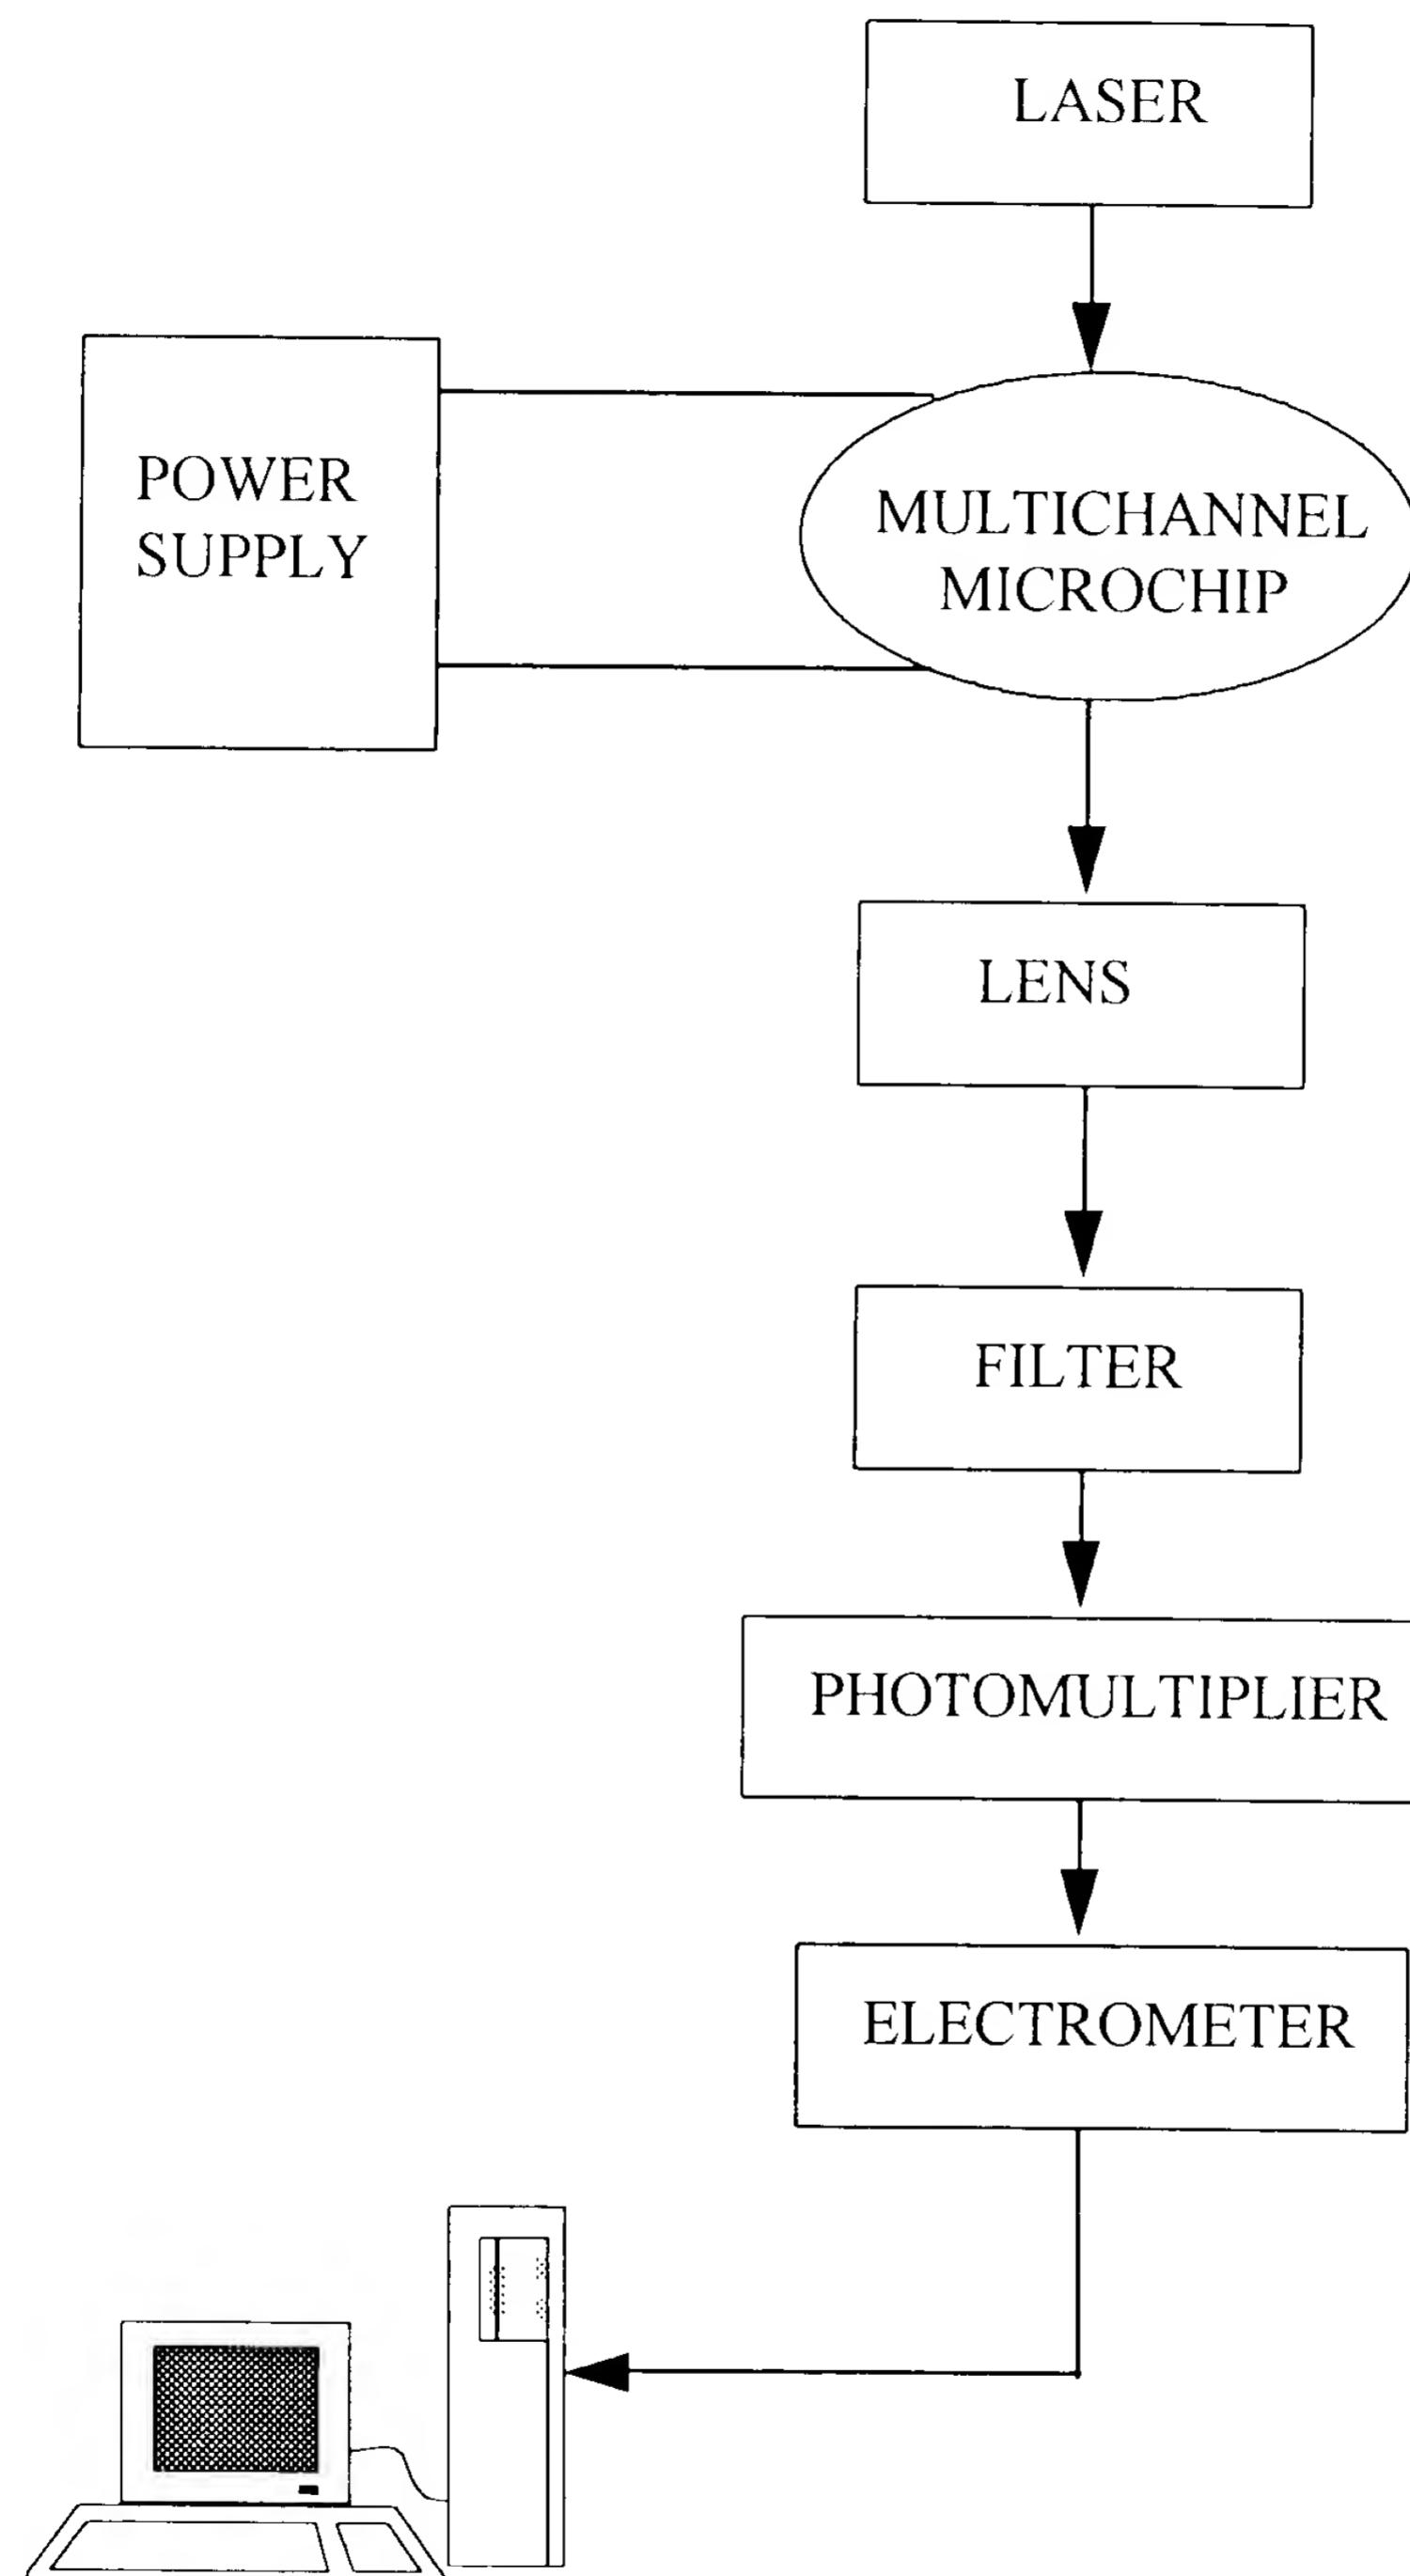



FIGURE 15

FIGURE 16

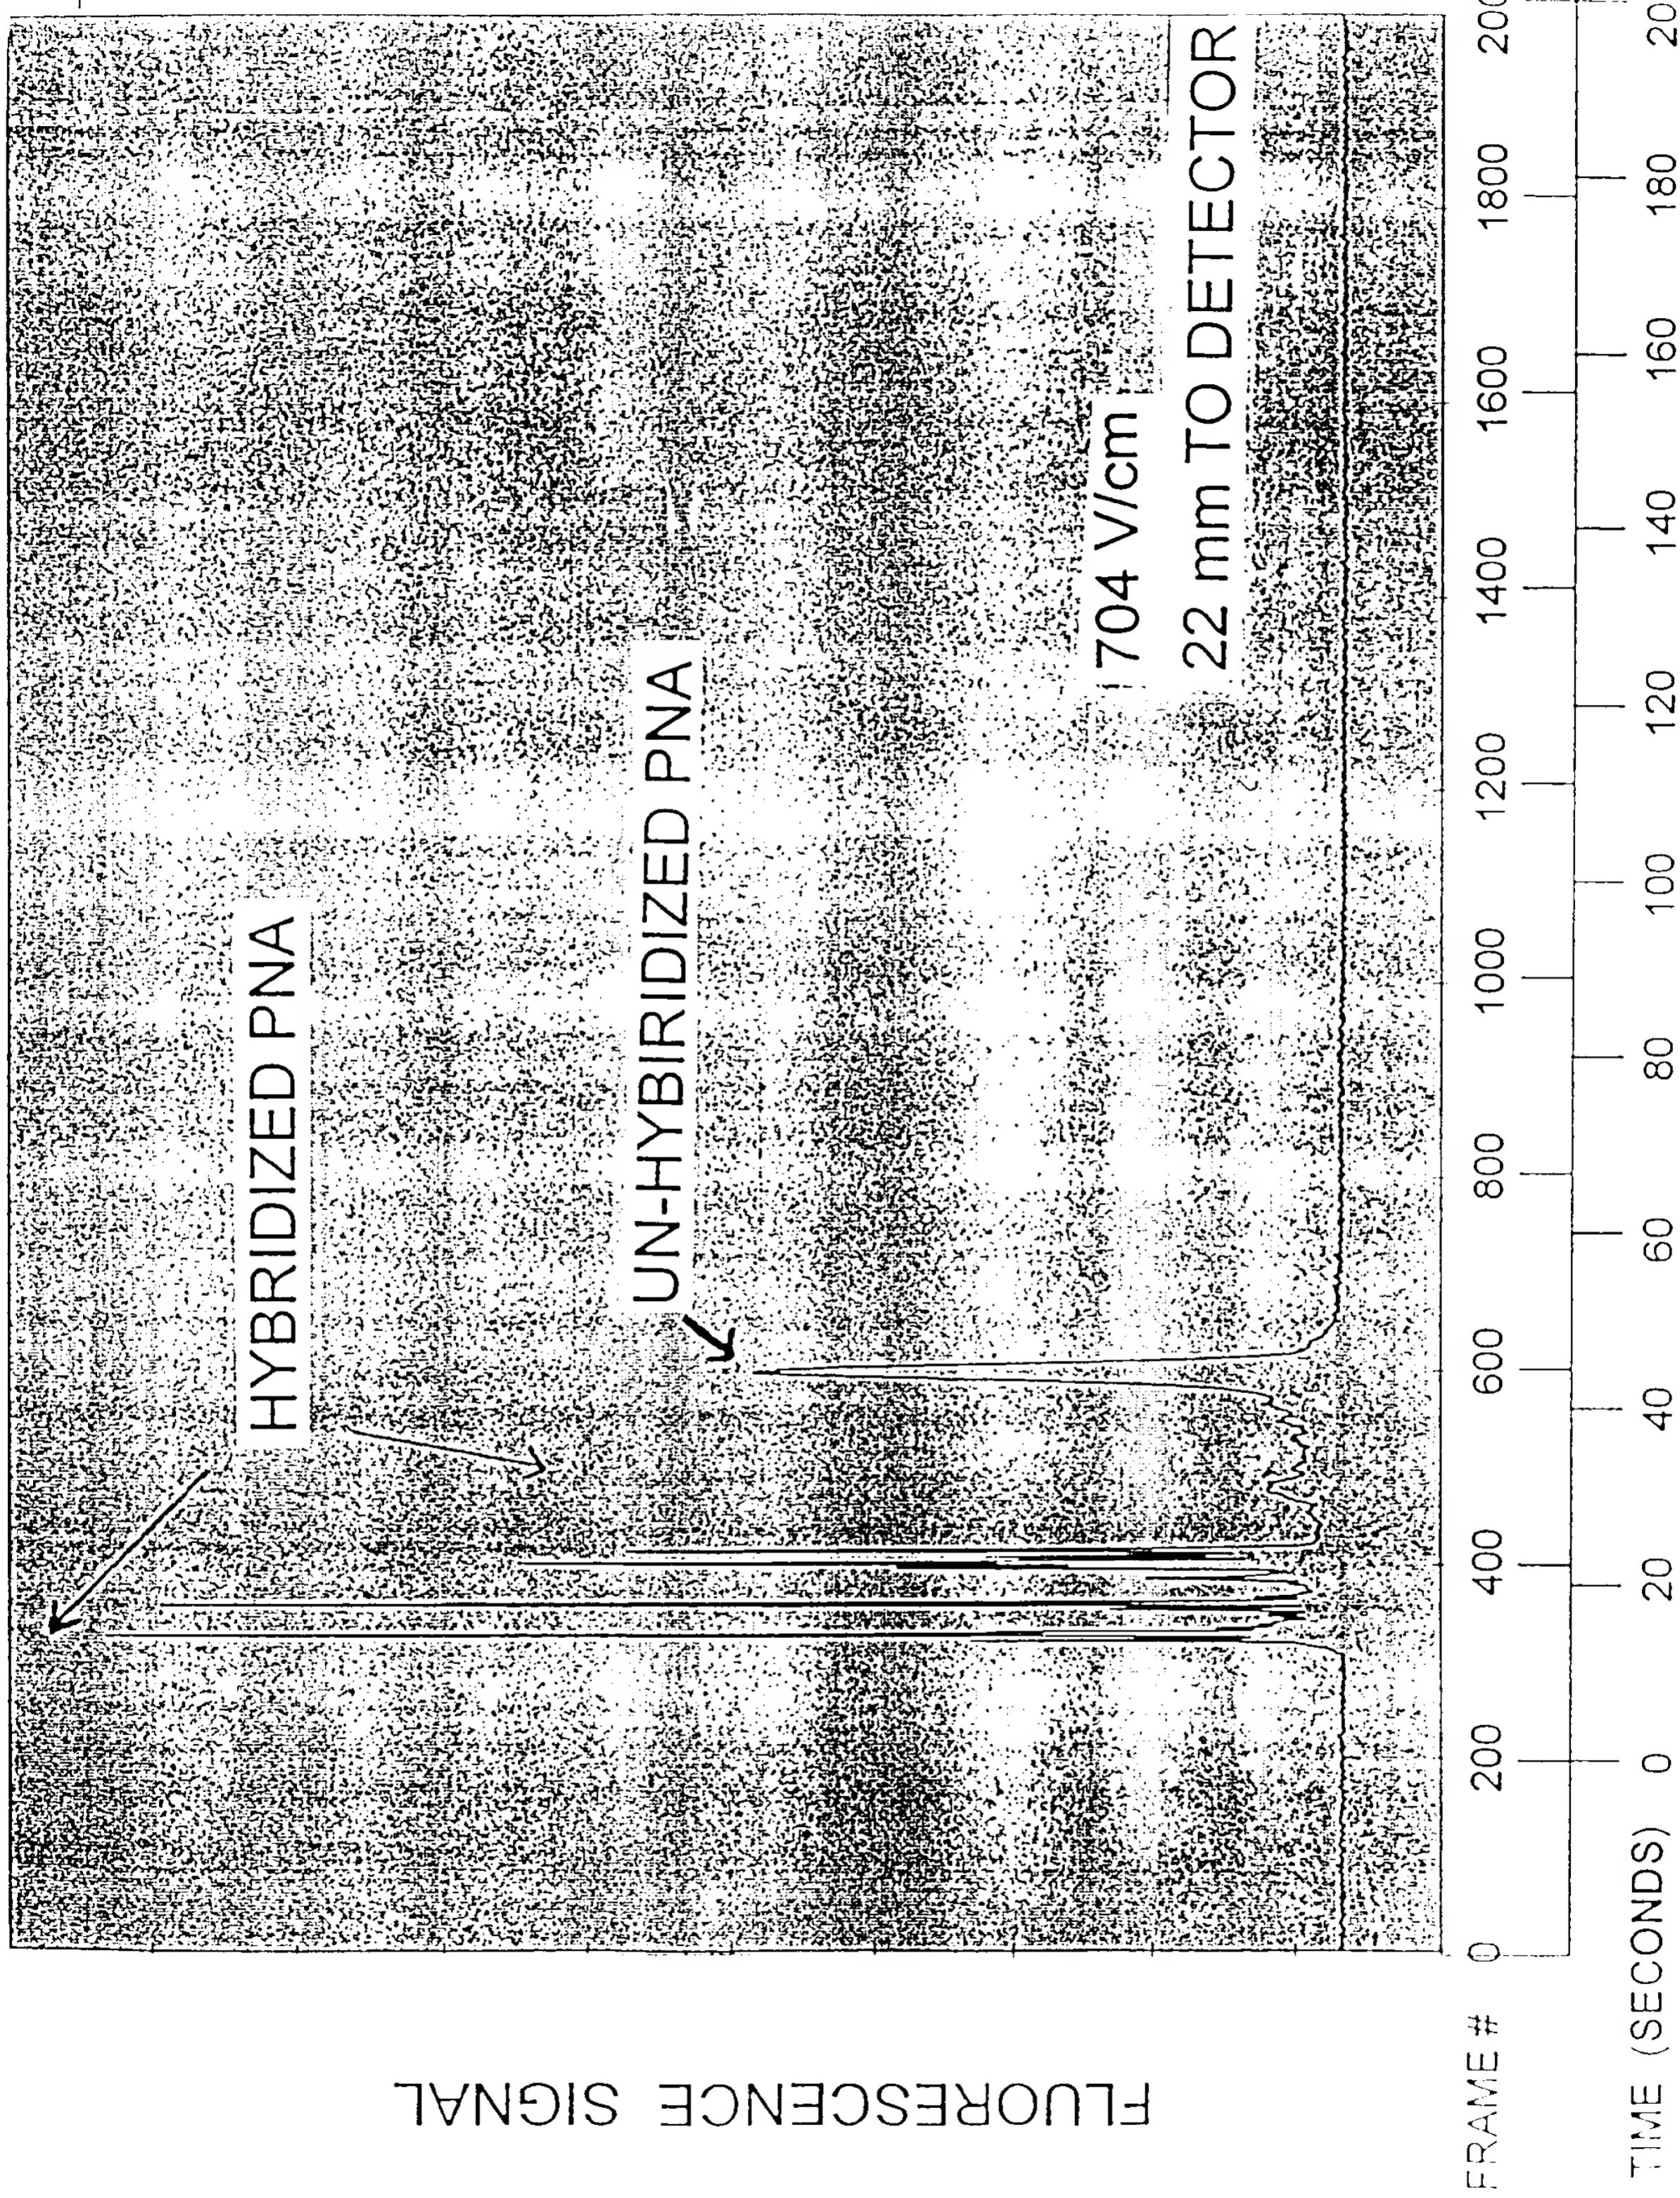


08 726093

FIGURE 17A

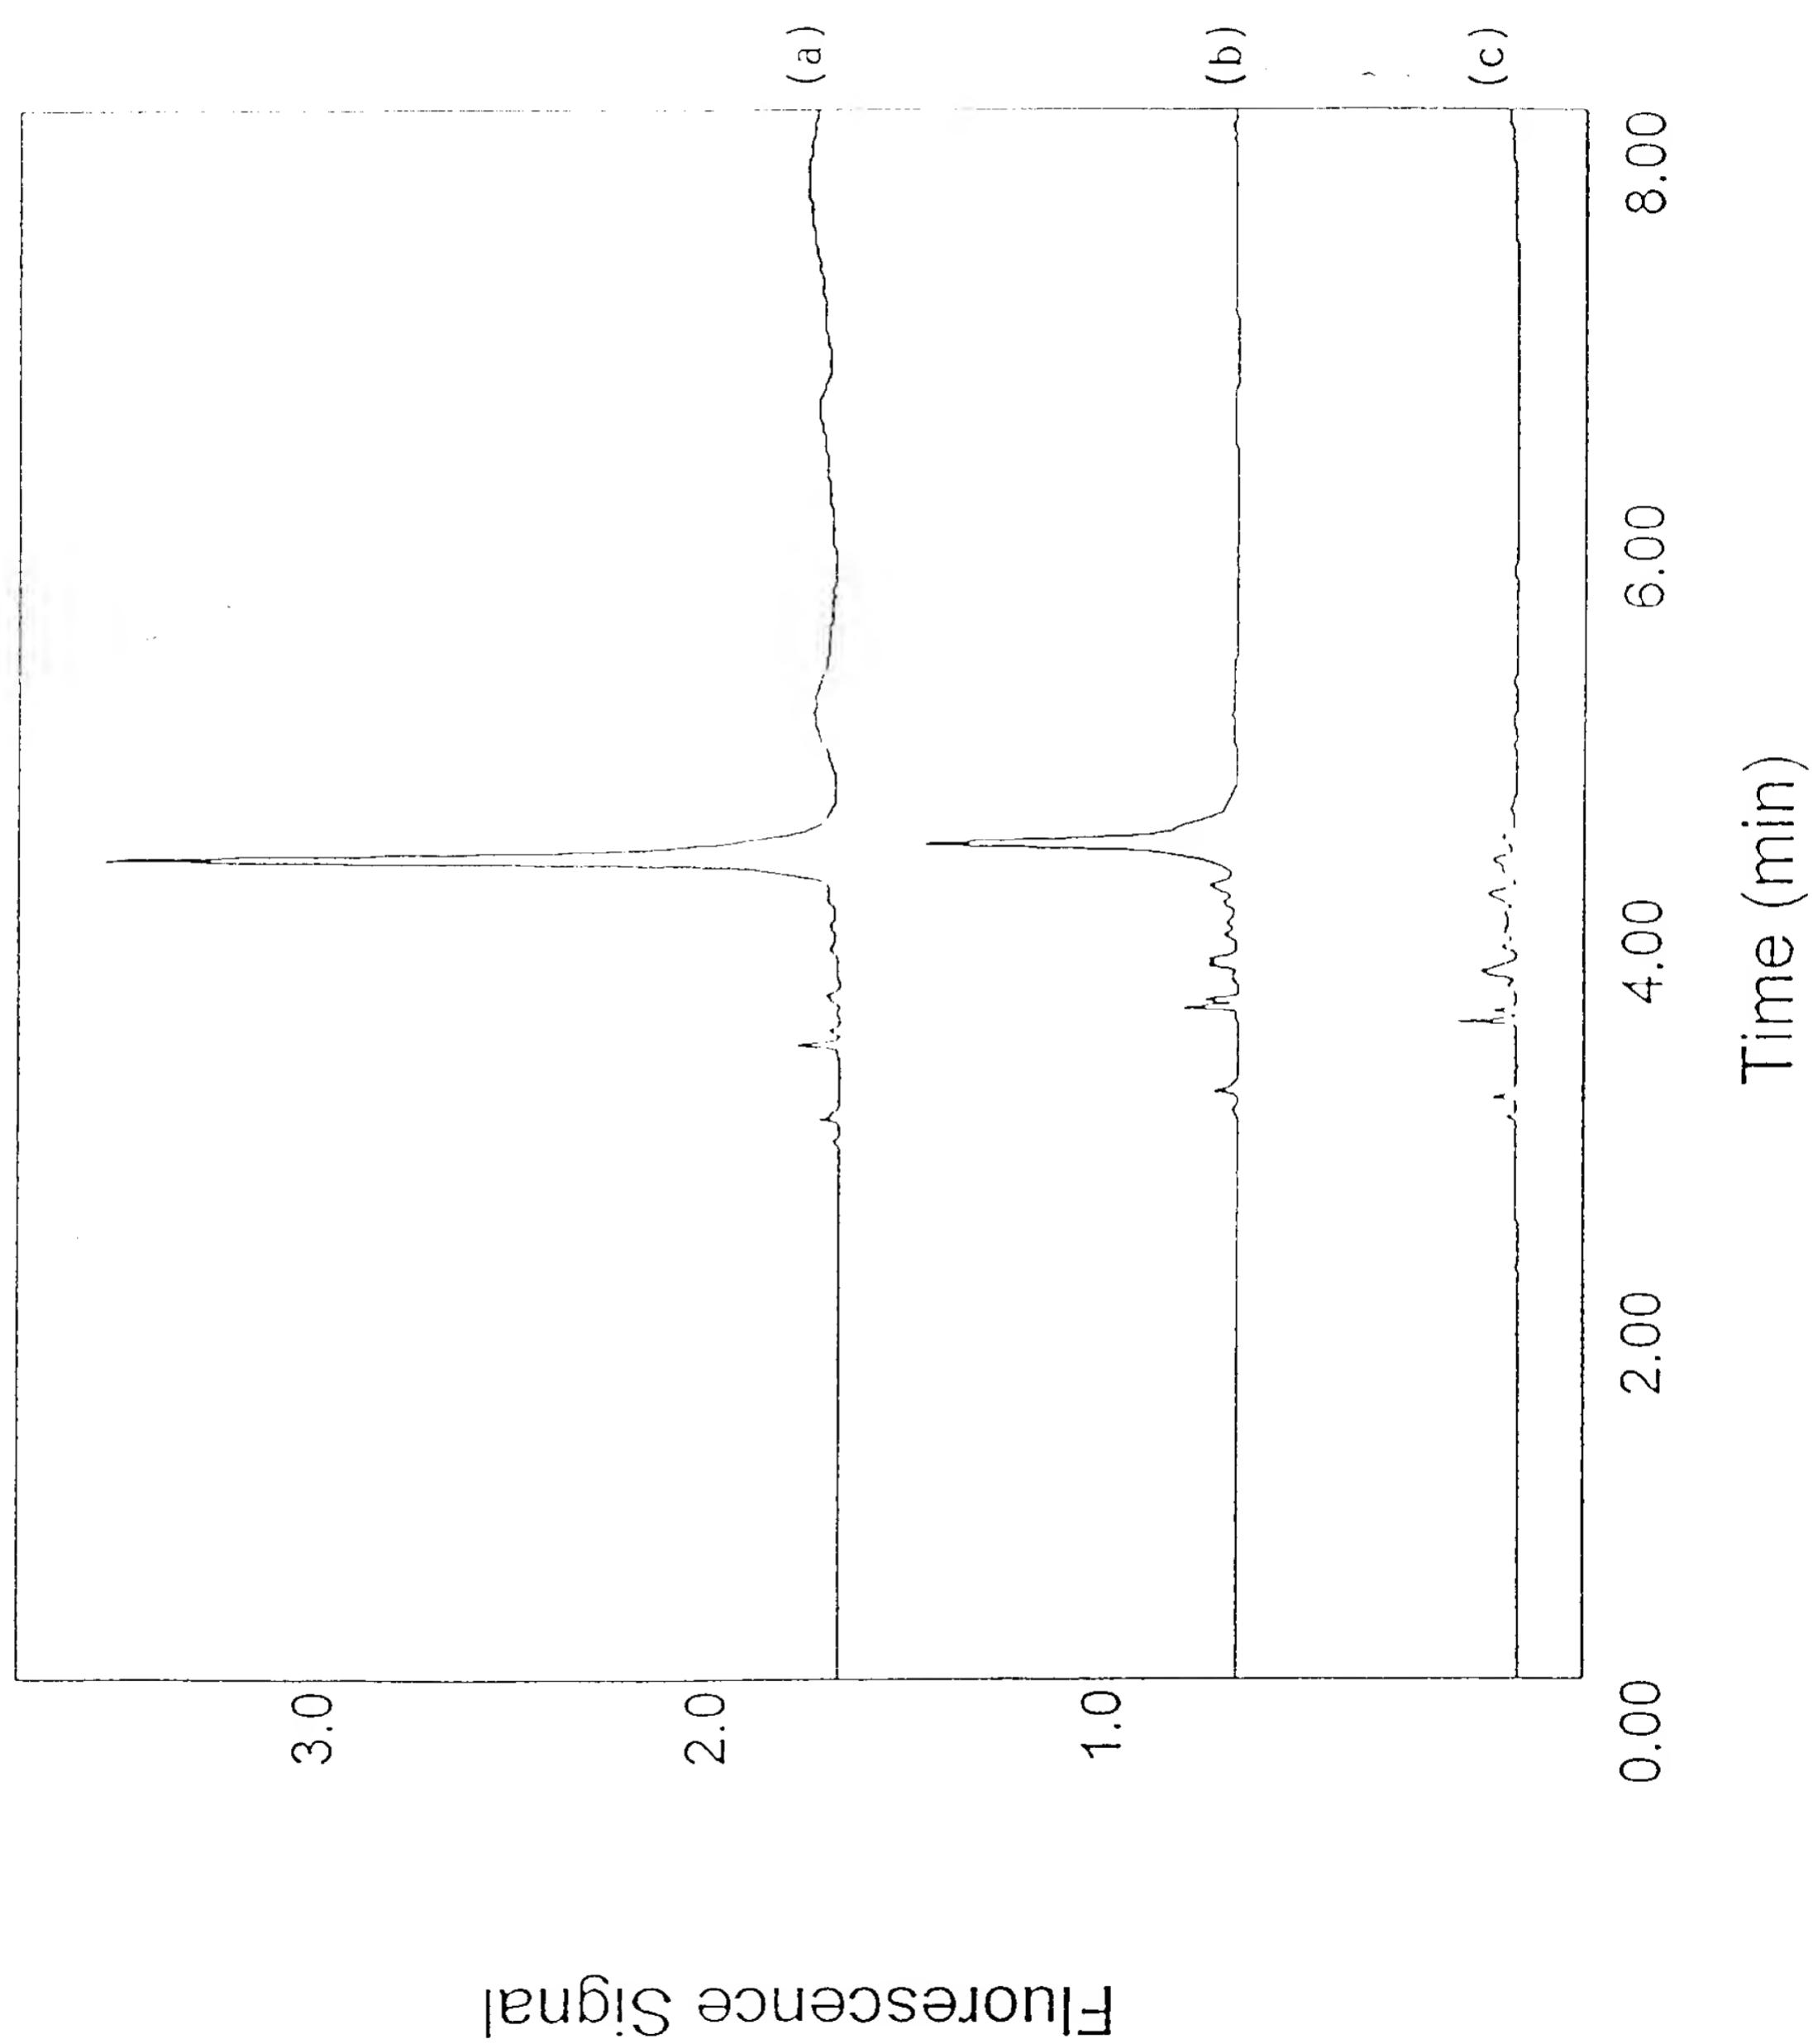

08 726093

FIGURE 17B

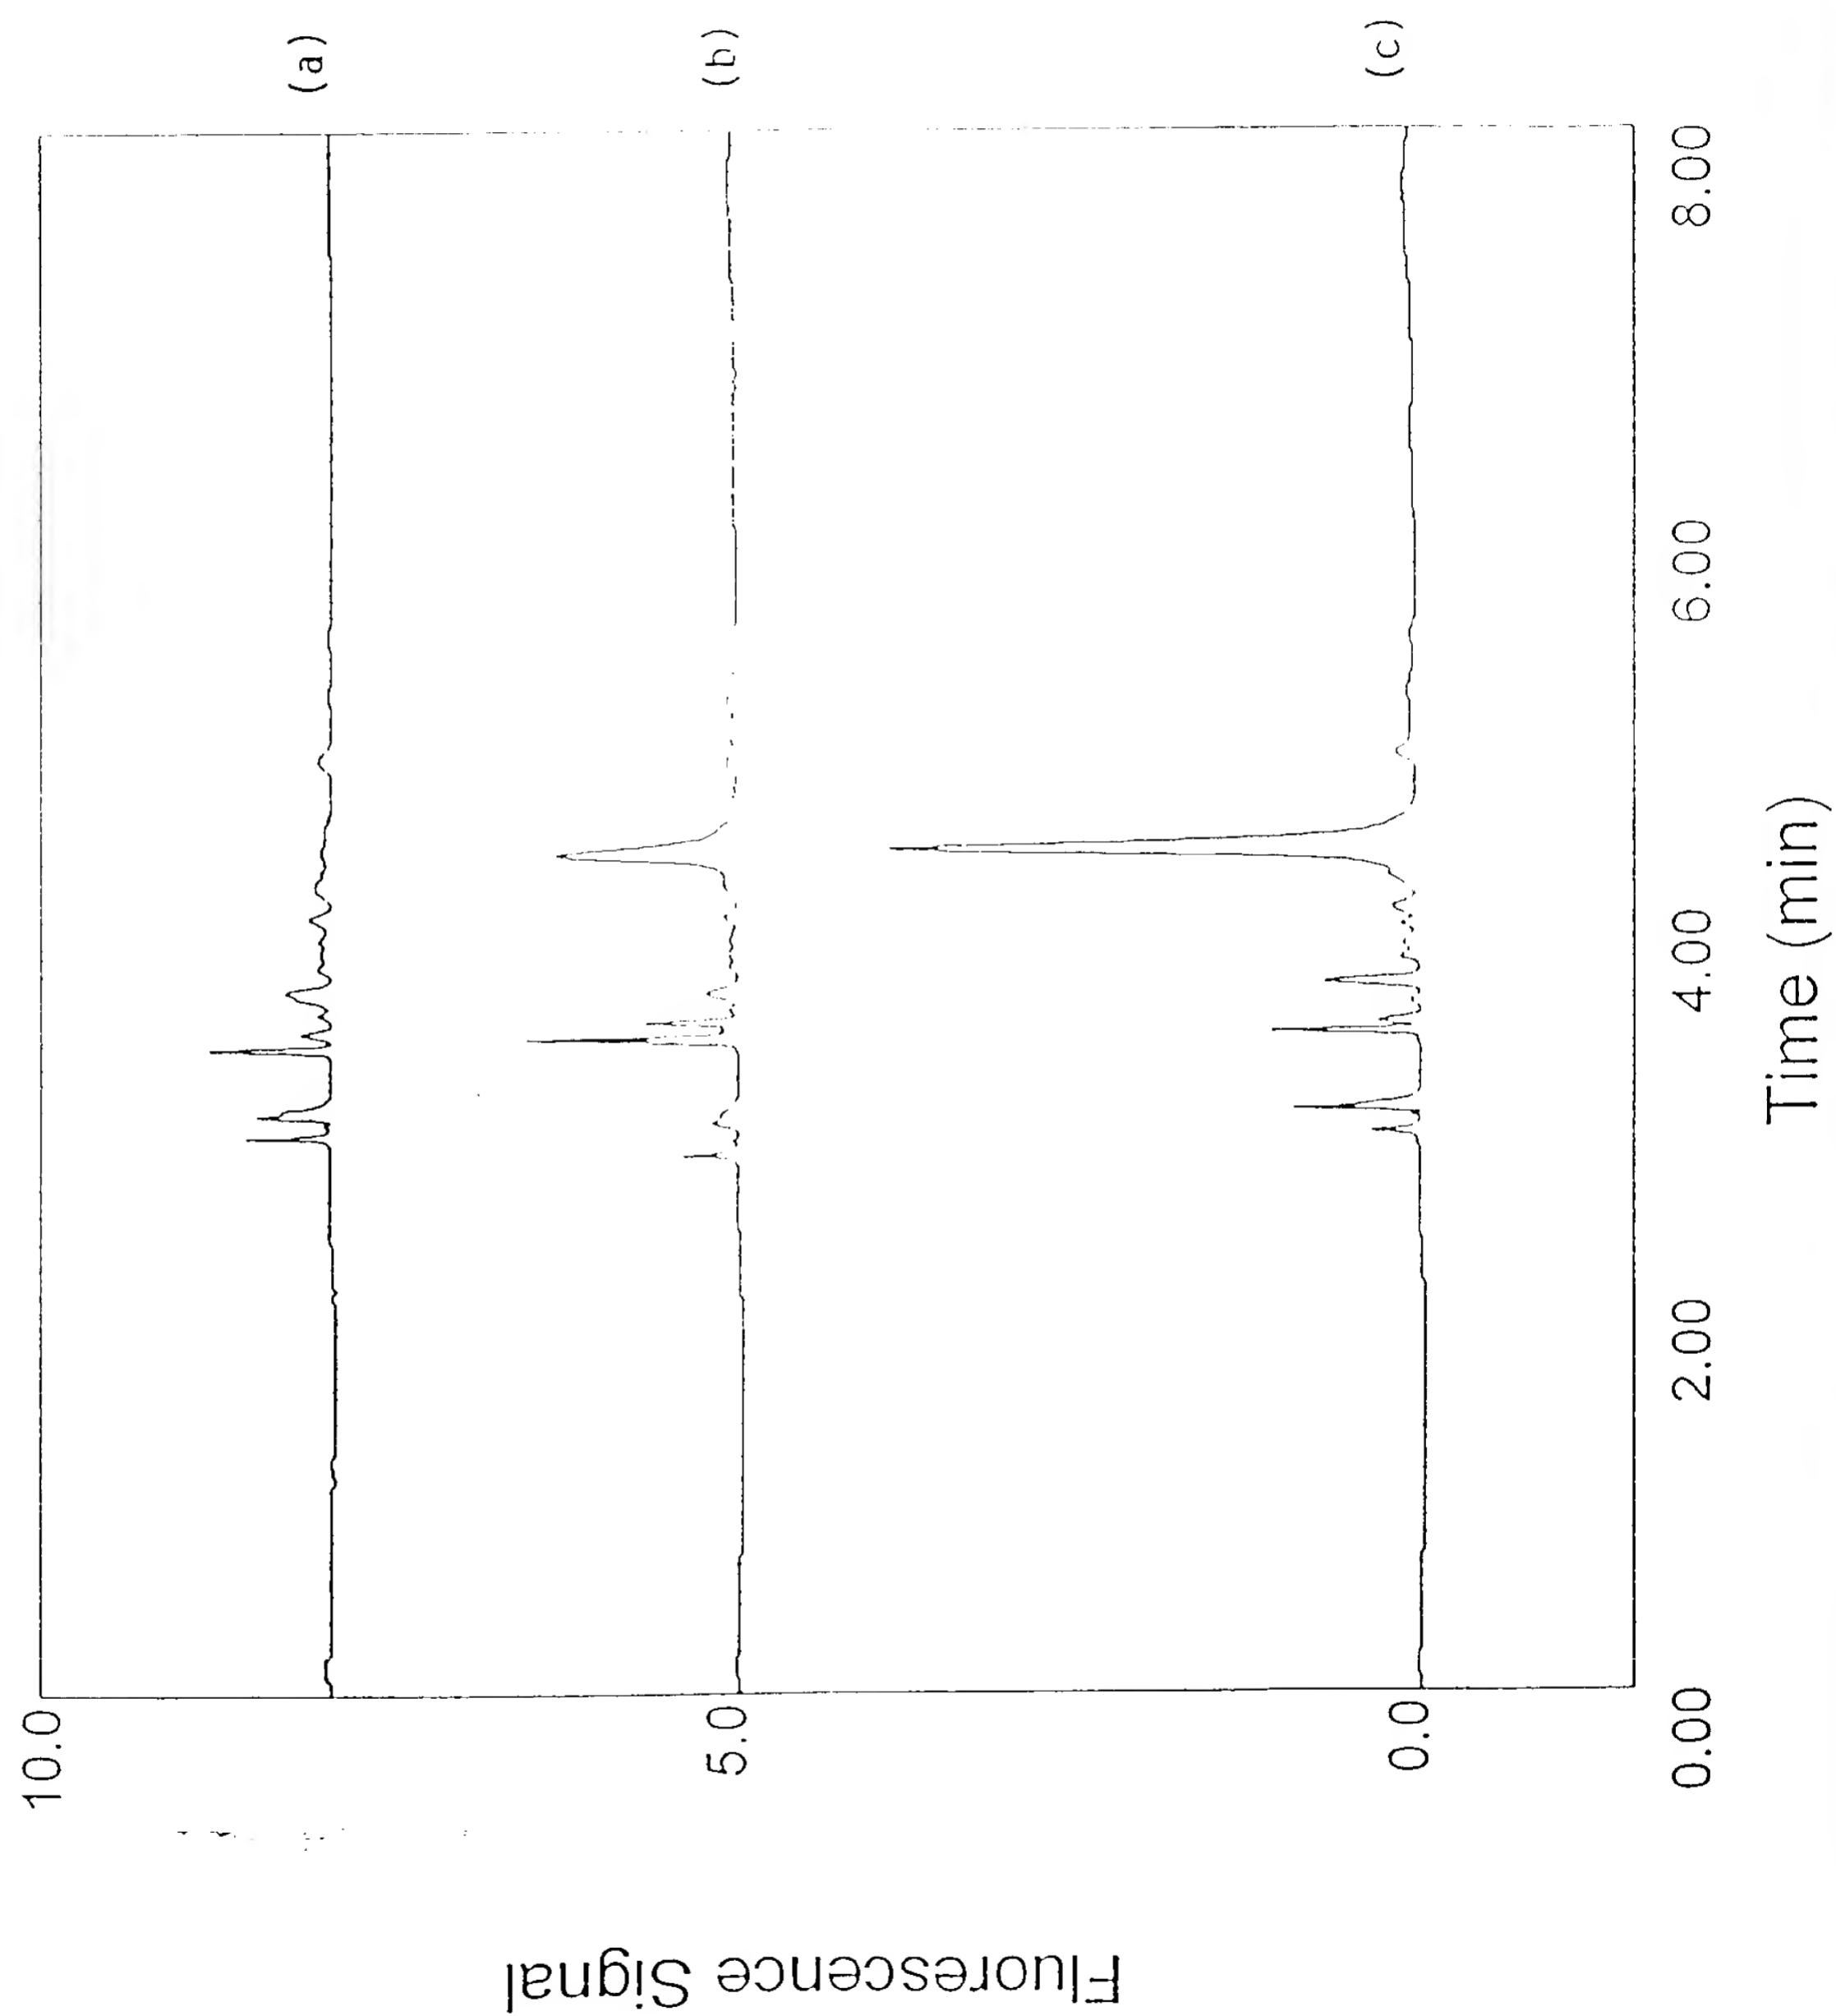

08 726093

FIGURE 18A


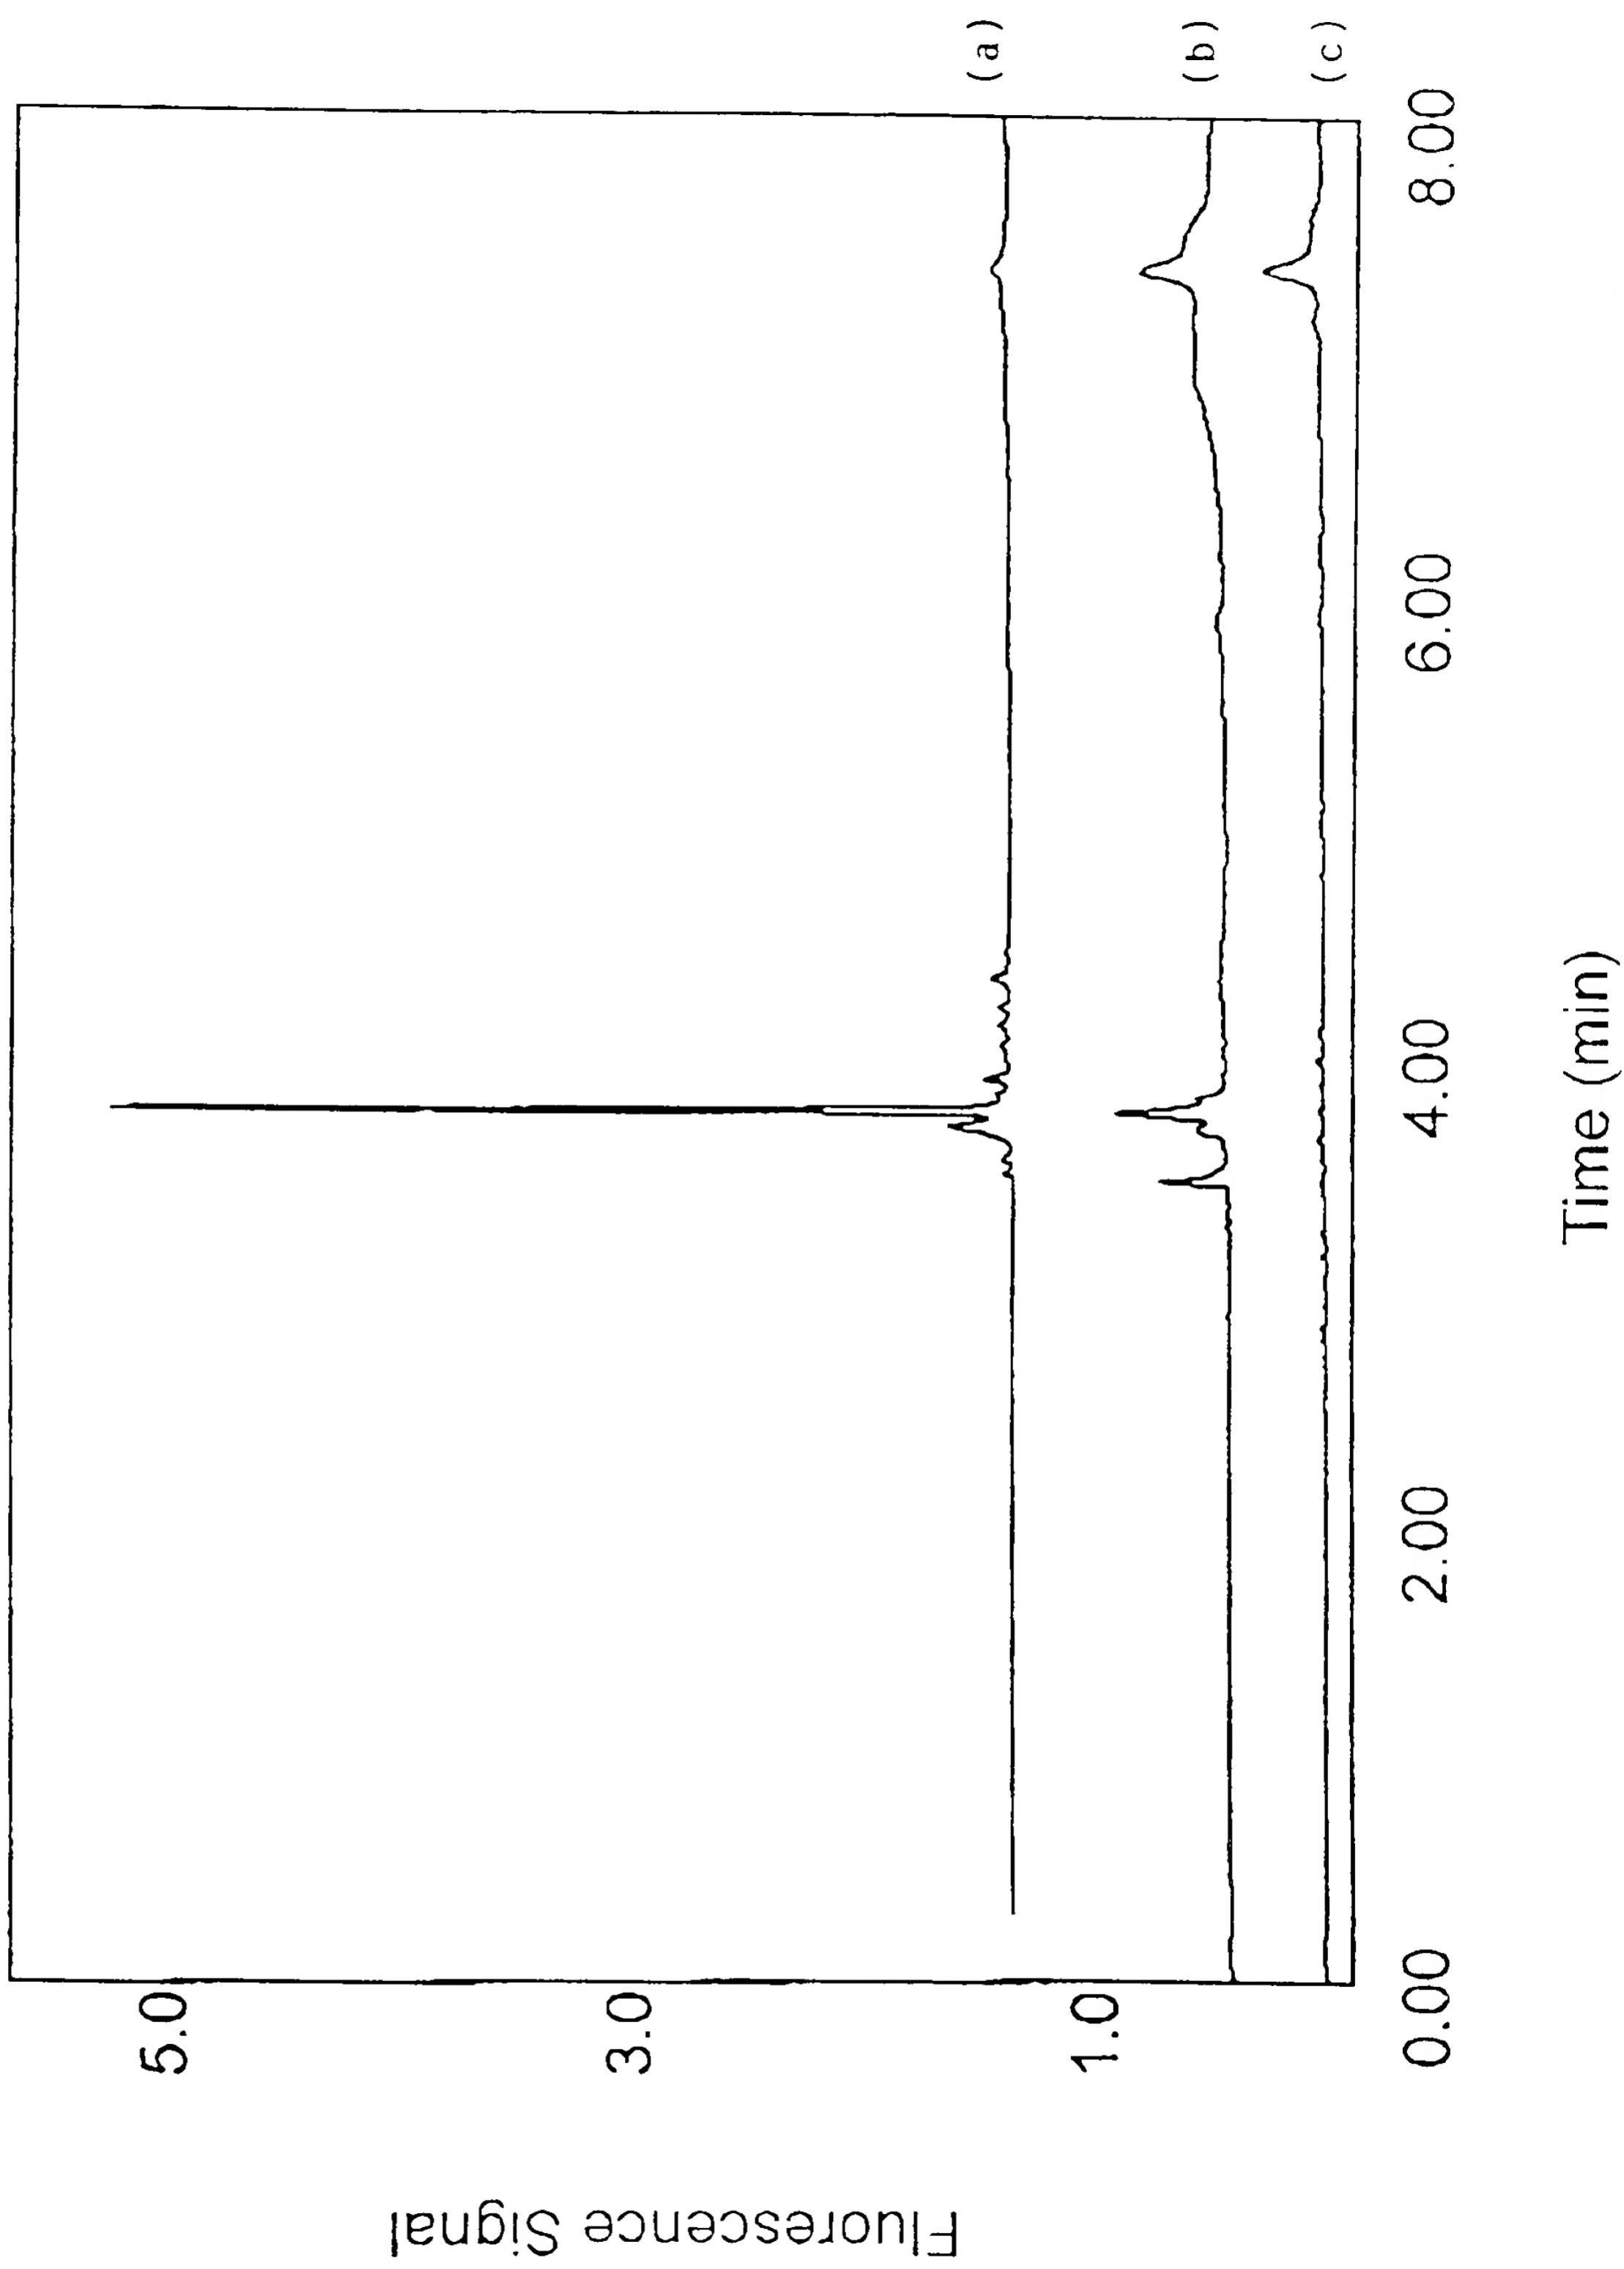


FIGURE 18B



08 726093

FIGURE 19

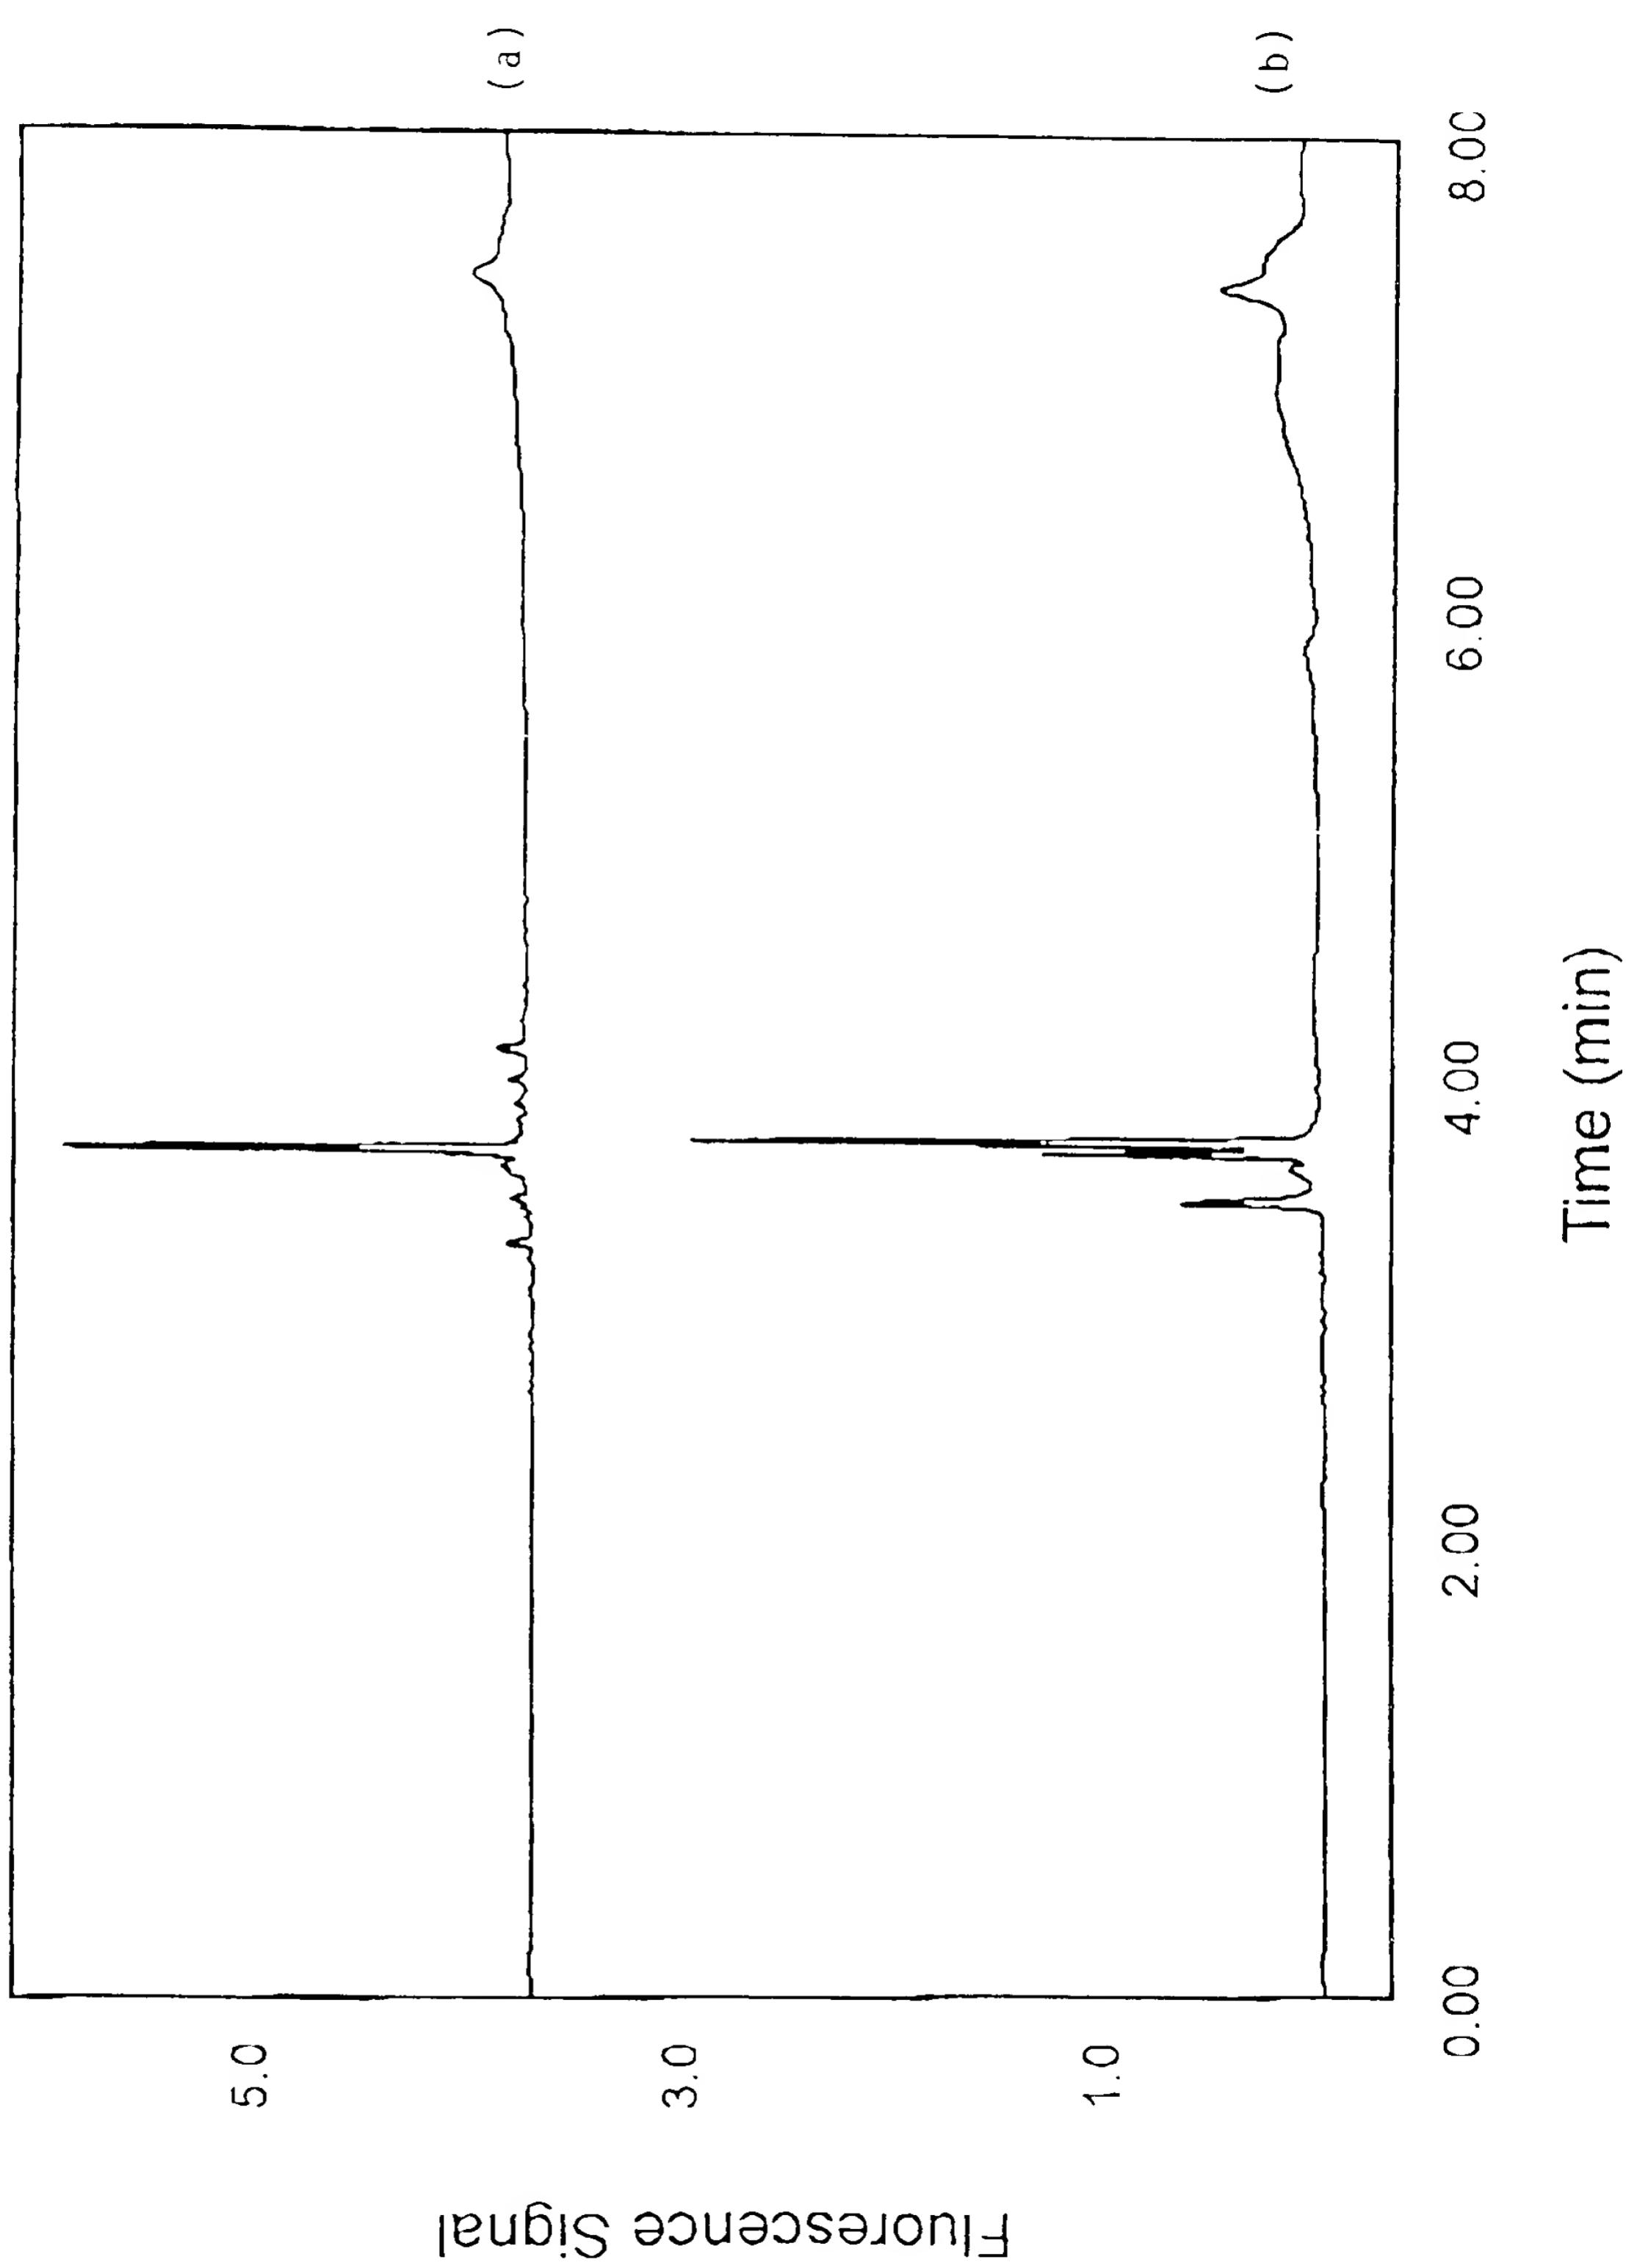